


Smart Door Lock

智能门锁

S51_DG

S51(CG

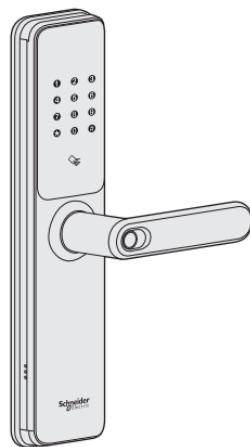

Schneider
Electric

尊敬的客户：

在使用本智能锁前，请阅读并理解所有说明内容。

因未能遵守说明而造成的损坏不在维修保证范围内。

刷卡功能仅适用于部分型号，具体请以产品实物为准。

在保修期内，如有下列情况之一，不属于免费保修范围。

1. 未按说明书要求正确使用或人为原因造成的损坏与故障。
2. 非我司专业人员拆卸，客户自行拆卸维修而造成的损坏。
3. 由于自然原因（地震、火灾、水灾）等外部不可抗因素所造成的损坏。

超出质保期的产品，将收取合理费用提供维修保养服务。

本品适用于每个单元有两个及以上疏散楼梯的住宅建筑内。

目录

1 重要信息 -----3		
安全		
警告		
旧产品和电池处理		
2 安装您的智能锁 -----4		
产品清单		
产品立体装配图		
安装前须知		
安装步骤		
3 了解您的智能锁 -----13		
前面板		
后面板		
4 设置您的智能锁 -----14		
设置前须知		
进入管理模式		
修改管理模式		
添加用户密码		
添加用户指纹		
添加用户卡片**		
删除用户密码		
删除用户指纹		
删除用户卡片**		
设置开门模式		
系统设置		
记录查询		
扩展功能 (选配)		
5 使用您的智能锁 -----19		
室外开锁		
机械钥匙开锁		
室外上锁/室内上锁/室内反锁		
防猫眼功能		
6 其它功能 -----21		
恢复出厂设置		
应急供电方法		
系统复位		
电池更换		
扩展组件 (选配)		

**此功能仅适用于带刷卡功能的型号

1 重要信息

安全

- 在使用本智能锁前，请阅读并理解所有说明。因未能遵守说明而造成的损坏不在保修范围内
- 建议使用本公司指定的附件/配件
- 仅使用本产品配置的碱性电池
- 请勿强行拆卸本产品，以免发出警报或损坏产品
- 请勿用尖锐物品刮擦指纹传感器，否则可能造成永久性损坏
- 请勿将产品接触腐蚀性物质，以免破坏外壳保护层
- 请勿在执手上悬挂物件，以免影响门锁正常使用
- 清洁产品，请用软布擦拭
- 请勿在设备操作时拆卸电池
- 请您选择专业的工程师安装门锁，并按照本公司的安装标准进行操作，切勿私自拆装
- 门锁安装调试合格后，请第一时间内修改出厂设置的默认管理密码并妥善保管好机械钥匙，不要轻易泄露密码信息
- 门锁触发低电量报警后，请及时更换掉全部电池，并确保安装正确

警告

- 不要将电池靠近火源，以免发生爆炸
- 请勿使用不符合安全规定的紧急电源为本产品供电
- 请勿用金属物将电池引线的两极连接短路，以免引起爆炸
- 确保由施耐德、或施耐德授权的服务中心或专业维修人员进行更换
- 使用由其它制造商生产的，或未经施耐德特别推荐的附件或部件，您的保修可能失效


旧产品和电池的处理

- 请自行了解当地的电子产品分类收集系统
- 请遵守当地规定，不要将旧电池丢弃到普通生活垃圾中
- 正确弃置旧产品有助于避免对环境和人类健康造成潜在的负面影响
- 电池不可与普通生活垃圾一起处理


2 安装您的智能锁

产品清单


本产品清单仅供参考，一切以包装实物为准。

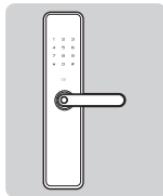


前面板
(含硅胶垫)

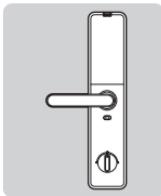

后面板
(含硅胶垫)

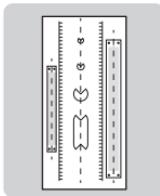


开孔模板

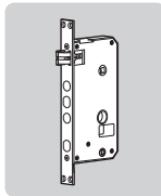

锁体



侧扣板

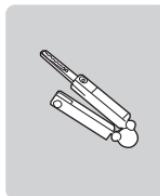

机械钥匙



电池&卡片**



安装配件包




使用说明书

**此功能仅适用于带刷卡功能的型号

安装立体装配图

了解安装立体装配图，有利于了解锁的构造。

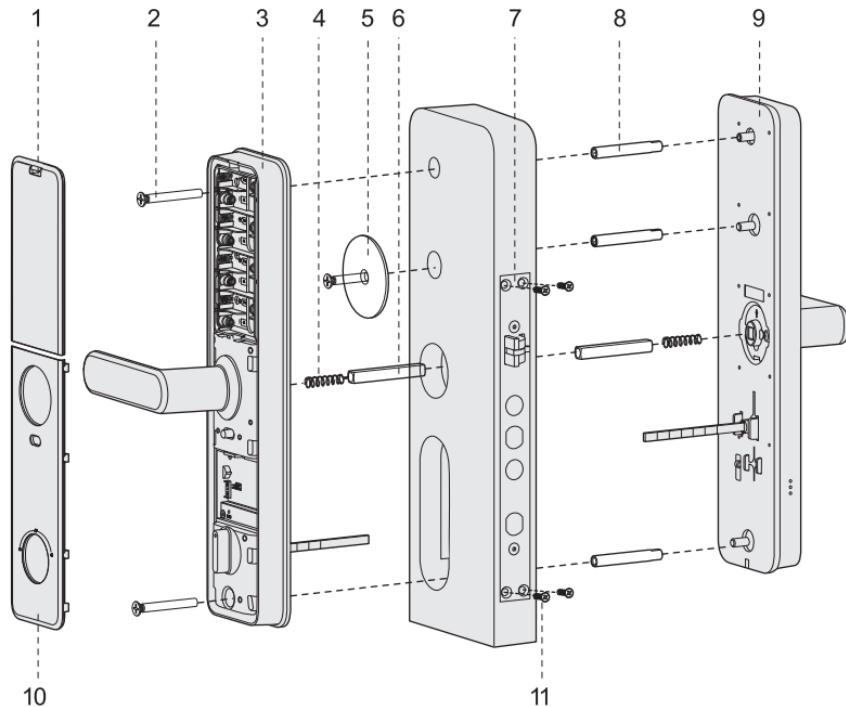


- 1、电池盖
- 2、M6固定螺丝（3个）
- 3、后面板组件
- 4、压簧（2个）
- 5、固定板
- 6、方轴（2个）
- 7、锁体
- 8、M6螺管（3个）
- 9、前面板组件
- 10、后面板下盖
- 11、固定螺丝（4个）


安装前须知

安装前确认开门方向


右外开

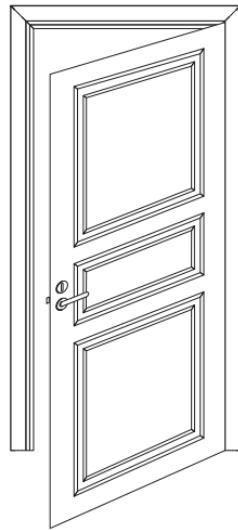


右内开

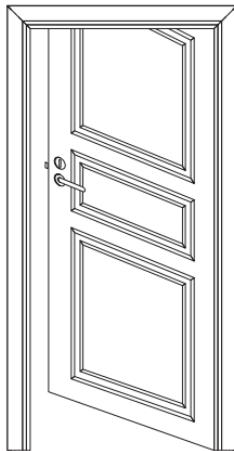


左外开

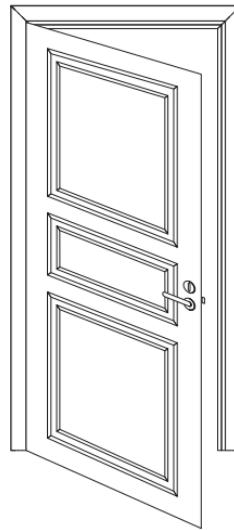

左内开

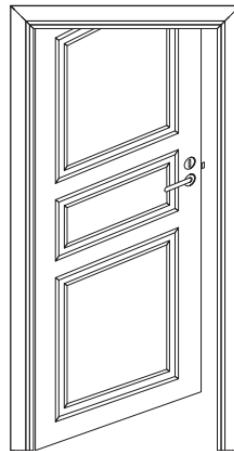


斜舌换向

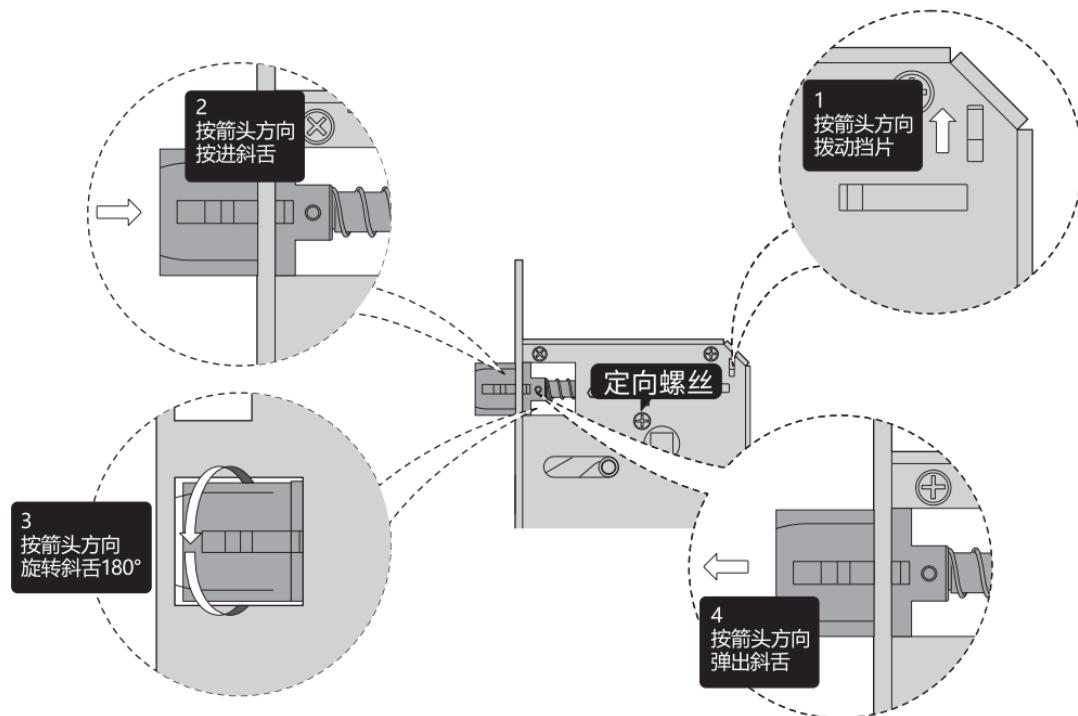


注意：根据内外开门需求，更改定向螺丝方向。（定向螺丝一定要装在门的内侧，哪面装定向螺丝，那面必须是后面板）

执手换向


前面板执手换向

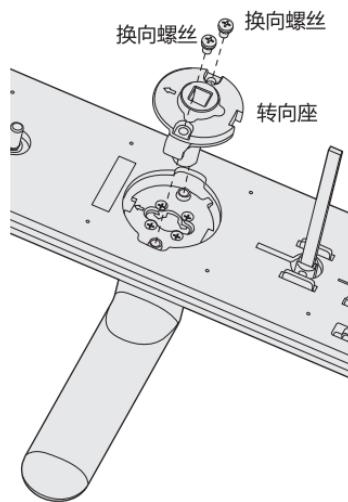

松开两颗换向螺丝后，依次
取出转向座。

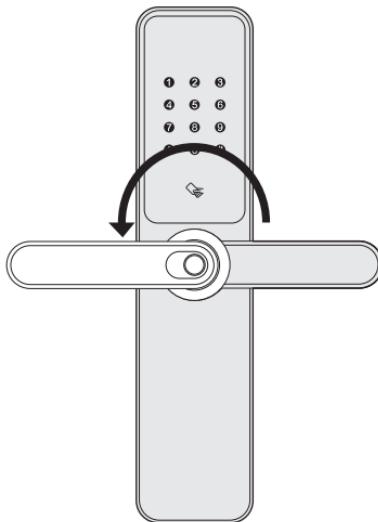


旋转执手180°至正确位置。

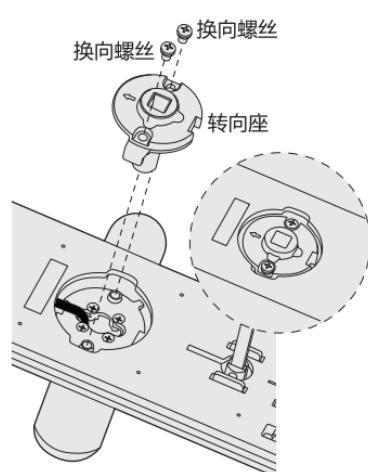


调整导线至上图一侧（向上），
再依次装入转向座，旋紧换向螺丝。


后面板执手换向

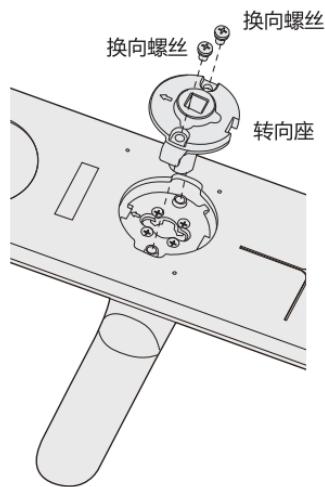

松开两颗换向螺丝后，依次
取出转向座。

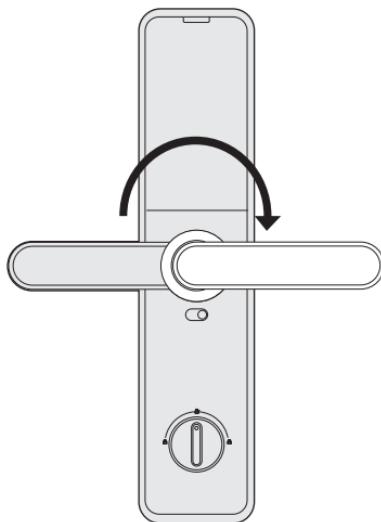


旋转执手180°至正确位置。

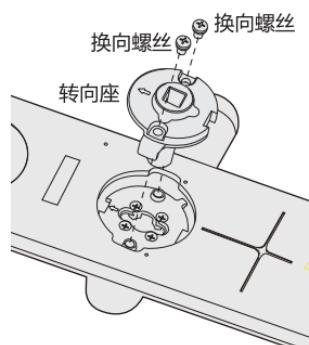


调整导线至上图一侧（向上），
再依次装入转向座，旋紧换向螺丝。

注意：根据门的厚度选择不同规格的配件包。默认出厂设置的配件包适用38-90mm的门厚，如果是其它规格的门，请联系我们。


安装步骤

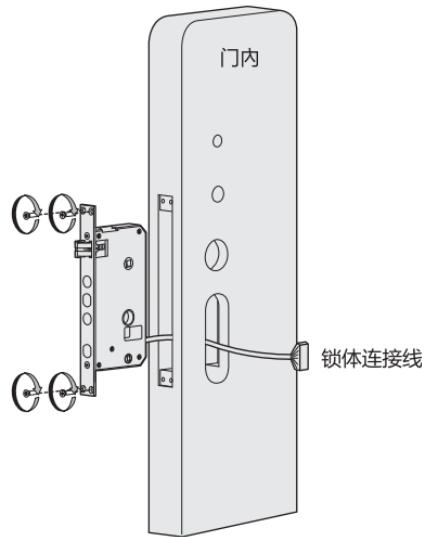

注：锁体连接线需穿过上图所示的孔位，进入到门内。
根据开孔模板在门上开好孔将锁体放入门框内，旋紧
四颗固定螺钉。

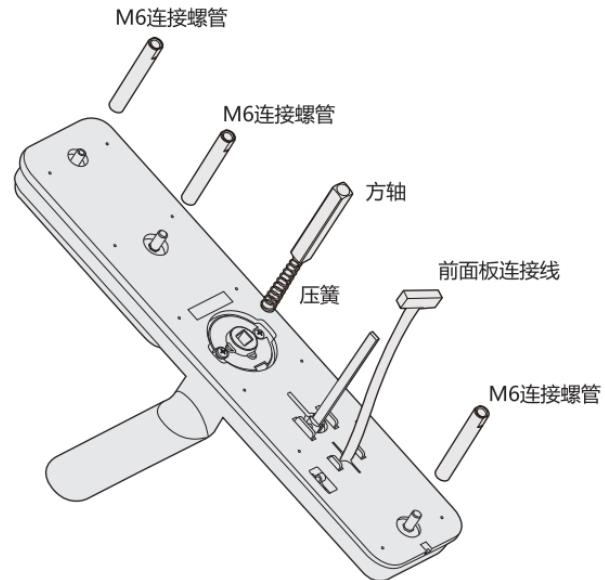


注：根据门的厚度，选择适当长度方轴和连接螺管。
在前面板上装上连接螺管，方轴孔中放上压簧和方轴。

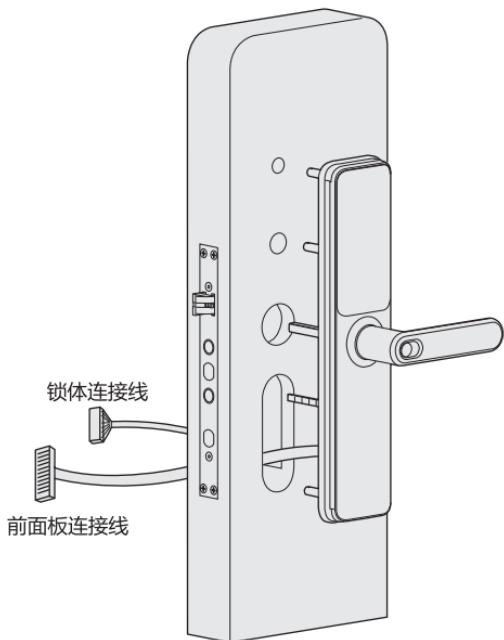


注：机械钥匙拨片根据门厚度剪到合适的长度。

将连接线穿过门上方的过线孔，前面板的方轴和机械钥匙拨片对准锁体上的相应转动口插入。

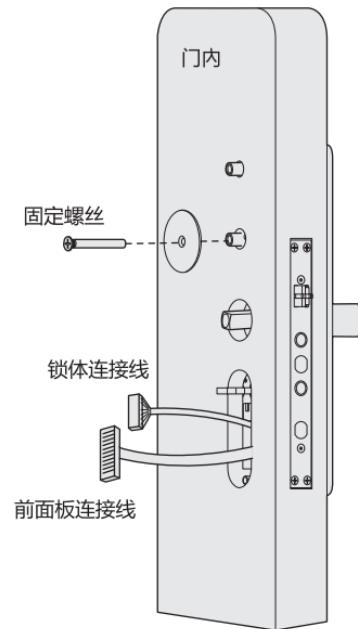

将固定板如图所示安装，锁紧固定螺丝，固定前面板。

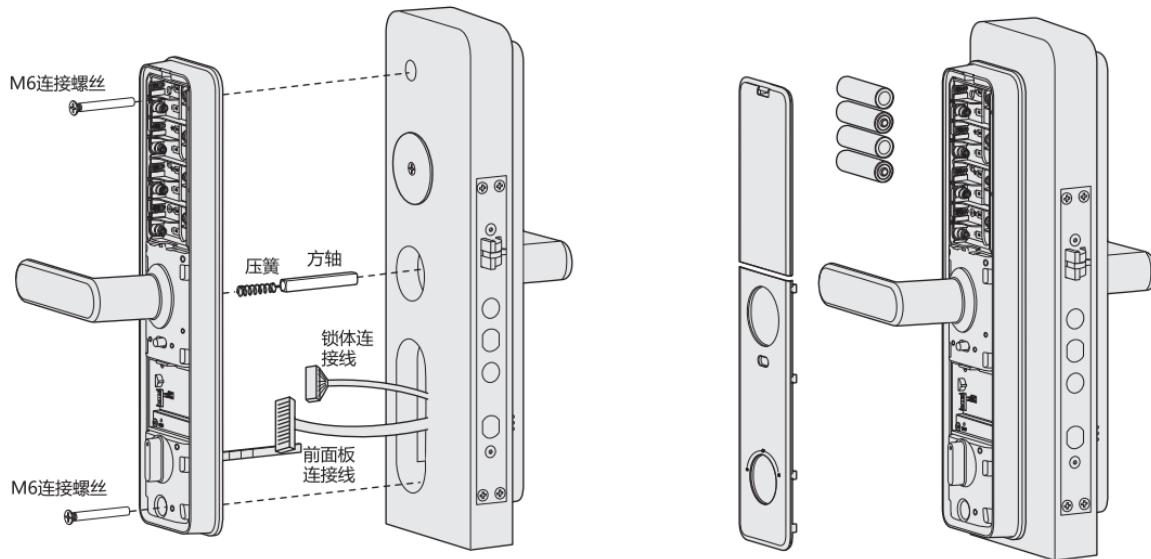


注：保险舌拨片根据门厚度剪到合适的长度。

在后面板上装上压簧和方轴，后面板的方轴和保险舌拨片对准锁体相应的转动孔插入，前面板连接线和锁体连接线插入后面板相应的接口，多余的线塞回过线孔，旋紧螺钉固定后面板。


在后面板上装上电池（4节五号电池）扣上电池盖。
检查前、后面板等，各个部件是否连接完好。

3 了解您的智能锁

前面板

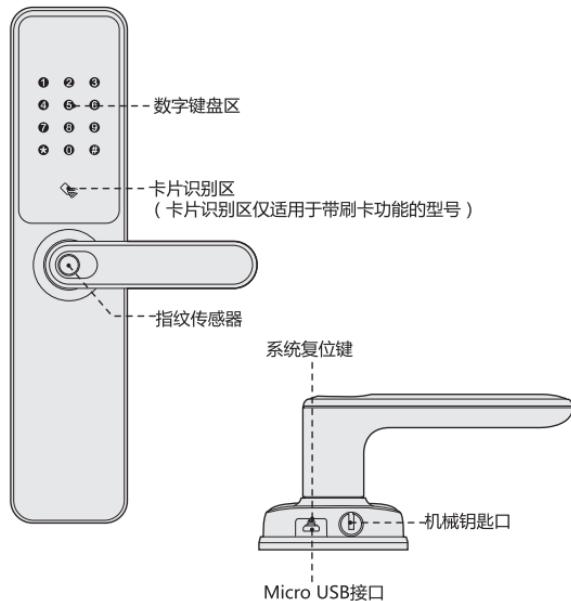

后面板

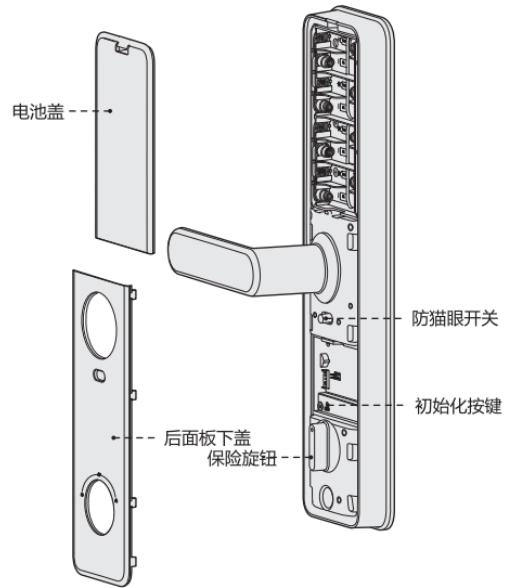

注：本示意图只作示意用途，实际以产品为准。

4 设置您的智能锁

设置前须知

智能锁的系统模式分为安全模式和常用模式，出厂默认的系统模式为常用模式。

	安全模式	常用模式
管理密码	有 进入安全模式前的管理密码	有 初始管理密码12345678
用户密码	10组 6-12位 编号00-04：常用密码 编号05-08：一次性密码 09：安全胁迫密码 注意：在安全模式下，一次性密码不可使用	10组 6-12位 编号00-04：常用密码 编号05-08：一次性密码 09：安全胁迫密码
指纹数量	100枚 有编号00-99	100枚 有编号00-99
智能卡片数量**	100枚 有编号00-99	100枚 有编号00-99
进入管理模式的方法	通过输入管理密码	通过输入管理密码

⚠ 设置安全模式前，必须先录入密码、指纹、卡片 **三者中的任意两个；支持32位虚位密码。

**此功能仅适用于带刷卡功能的型号

用户编号

在安全模式下，当您输入密码、读取指纹、智能卡片**资料时，需要对用户进行编号，当您需要删除个别用户时，您可以依据其编号从系统中直接删除，无需全部删除。


可以将用户资料填入此编号表，以便方便管理。

编号	姓名	密码	指纹	智能卡片**
00				
01				
02				
03				
04				
05				
06				
07				
08				
09				

**此功能仅适用于带刷卡功能的型号

进入管理模式

首次使用，需要选择语言，1为中文，2为英语；

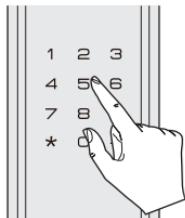

注意事项：

00~04为常用密码
05~08为临时密码，开锁一次后立即失效，
在安全模式下临时密码不能开锁。
仅在配置有无线模块时，
09才可作为胁迫密码，开锁后可输出报警信号。

初始管理密码：12345678

- 1、用手掌面触摸按键区唤醒按键，键盘灯点亮
- 2、先按*键两次，再输入管理密码，按#键确认
- 3、语音提示：已进入管理模式

△ 如果管理密码为初始密码，请先修改管理密码。

修改管理密码

在管理模式下：



按下1键进入用户设置，再按9键进入修改管理密码。



输入新的管理密码，按#键确认，再次输入管理密码，按#键确认。语音提示设置成功。

用户设置

添加用户密码

在管理模式下：



按下1键进入用户设置，再按1键进入添加用户密码，
输入2位用户编号，按#键确认。



输入6-12位开门密码，按#键确认，再次输入开门
密码，按#键确认。语音提示设置成功。

添加用户指纹

在管理模式下：




按下1键进入用户设置，再按2键进入添加用户指纹，
输入2位用户编号，按#键确认。



将手指按压在指纹传感器上，待听到语音提示“请
拿开手指，再放一次”时，拿开手指重新放回指纹
传感器上，根据语音提示重复多次，待听到语音提
示添加成功后，表示用户指纹添加成功。

添加用户卡片**

在管理模式下：

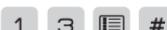

按下1键进入用户设置，再按3键进入添加用户卡片，
输入2位用户编号，按#键确认。

**此功能仅适用于带刷卡功能的型号



将卡片靠近识别区直到嘀声响，语音提示添加成功。

删除用户密码

在管理模式下：

1 4 1 #

按下1键进入用户设置，再按4键进入删除用户密码，再按1键进入到单个删除，输入2位用户编号，按#键确认，语音提示删除成功。

1 4 2

按下1键进入用户设置，再按4键进入删除用户密码，再按2键进入到全部删除，语音提示删除成功。

删除用户指纹

在管理模式下：

1 5 1 #

按下1键进入用户设置，再按5键进入删除用户指纹，再按1键进入到单个删除，输入2位用户编号，按#键确认，或将要删除的指纹放在指纹传感器上，直到嘀声响，语音提示删除成功。

1 5 2

按下1键进入用户设置，再按5键进入删除用户指纹，再按2键进入到全部删除，语音提示删除成功。

删除用户卡片**

在管理模式下：

1 6 1 #

按下1键进入用户设置，再按6键进入删除用户卡片，再按1键进入到单个删除，输入2位用户编号，按#键确认，或者将要删除的卡片靠近卡片识别区，直到“嘀”声响，语音提示删除成功。

1 6 2

按下1键进入用户设置，再按6键进入删除用户卡片，再按2键进入到全部删除，语音提示删除成功。

设置开门模式

在管理模式下：

1 7 1

按下1键进入用户设置，再按7键进入设置开门模式，再按1键选择常用模式，密码、指纹、卡片验证开锁。

1 7 2

按下1键进入用户设置，再按7键进入设置开门模式，再按2键选择安全模式，密码+指纹(密码+卡片或者指纹+卡片)，双重验证开锁。

系统设置

语音设置

在管理模式下：

**此功能仅适用于带刷卡功能的型号

2 1 1 或 2

按下2键进入系统设置，再按1键进入语音设置：按1键设置为语音模式，整个系统语音提示；按2键，设置为静音模式，整个系统无语音提示(除报警音和操作管理菜单外)。

语言设置

在管理模式下：

2 2 1 或 2

按下2键进入系统设置，再按2键进入语言设置：按1键设置为中文模式，整个系统提示音为中文；按2键，设置为英文模式，整个系统提示音为英文。

时间设置

在管理模式下：

2 3

按下2键进入系统设置，再按3键进入时间设置：请输入时分4位时间，例如：13:40，请输入1340，输入完毕以#键结束，设置成功后，系统会播报一次。

日期设置

在管理模式下：

2 4

按下2键进入系统设置，再按4键进入日期设置：请输入年月日8位日期，例如：2020.06.08，请输入20200608，输入完毕以#键结束，设置成功后，系统会播报一次。

记录查询

系统查询

在管理模式下：

3 1

按下3键进入记录查询，再按1键进入系统查询：语音播报本锁防伪码。

扩展功能（选配）

加入网络


在管理模式下：

4 1 或 2

按下4键进入扩展功能：按1键加入网络；按2键退出网络；

5 使用您的智能锁

室外开锁

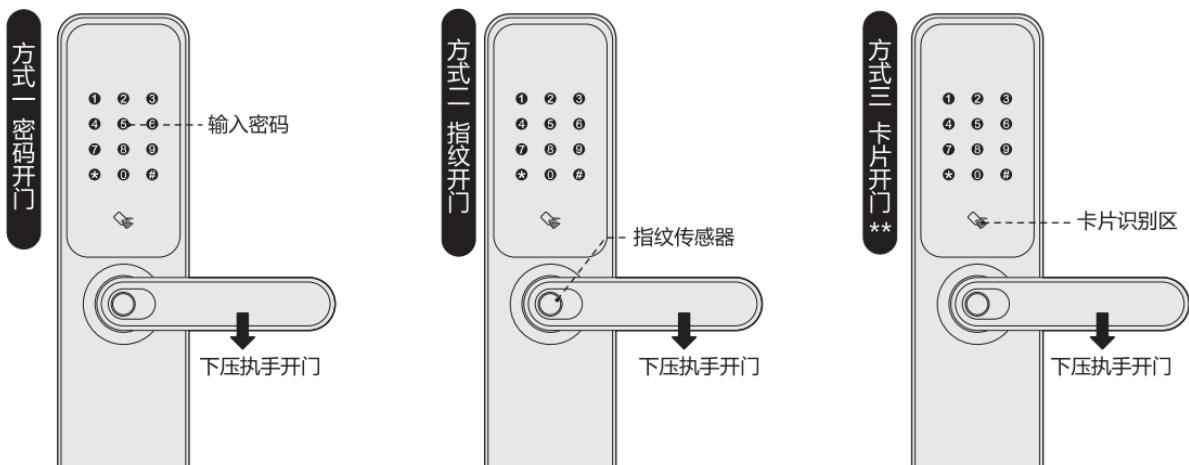

室外|前面板

触摸数字键盘区，唤醒系统；
在数字键盘区域输入已经添加的密码，按#键确认；
语音提示“验证成功，请开门”，
下压执手开门。

室外|前面板

直接将已经添加的指纹的手指
放在指纹传感器上；
语音提示“验证成功，请开门”，
下压执手开门。

室外|前面板

将已经添加的卡片放置卡片
识别区；
语音提示“验证成功，请开门”，
下压执手开门。

⚠ 安全模式下，需要密码+卡片**（密码+指纹、卡片**+指纹）双重验证才能开锁；用户密码前后可任意添加虚位密码（包括虚位密码在内长度不超过32位）。


**此功能仅适用于带刷卡功能的型号

机械钥匙开锁


如果出现忘记密码、电池耗尽或系统无法启动等紧急情况，可使用备用机械钥匙开锁。



1. 剪开钥匙盒，取出机械钥匙，推开推钮，划出钥匙。

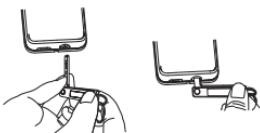

2. 把机械钥匙插入锁孔，钥匙套与钥匙成垂直90°，钥匙套向执手方向转动90°，直至靠近门面。

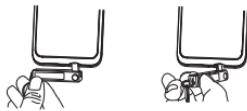


3. 将钥匙套向下转动180°，使用钥匙套平行于水平面，向执手方向水平转动钥匙套，即可开锁。

室外上锁/室内上锁/室内反锁




室外|前面板

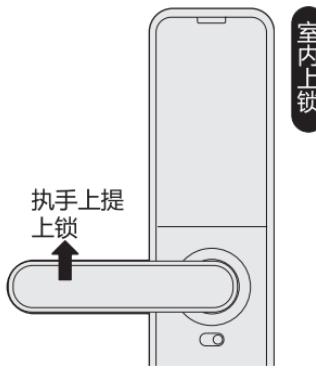

室内|后面板

室内上锁

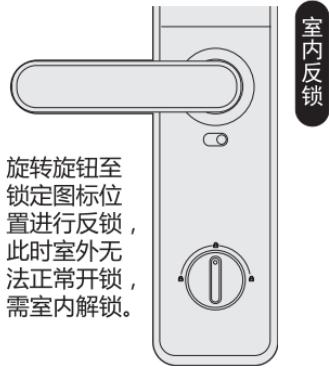


室内|后面板

防猫眼功能

开启此功能，可实现从室内锁定本锁，室内不能开启本锁，室外可正常开锁


- 1、功能开启
将开关拨至红色档位置
- 2、功能关闭
将开关拨至绿色档位置

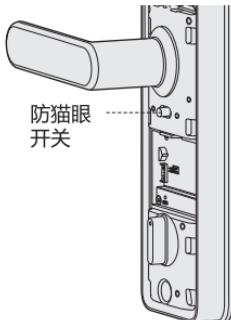

6 其它功能


恢复出厂设置

如果您不慎遗忘管理密码，可拆开后面板下盖，在通电状态下，长按5秒初始化按键待语音提示已恢复出厂设置，请及时修改管理密码，即表示本锁已初始化成功。

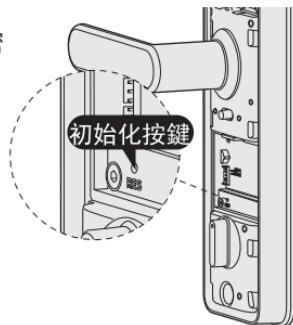

应急供电方法

当电池电压不足时，无法从外部开启时，您可以通过使用5V充电宝作为应急电源，通过Micro USB接口给门锁上电，打开门锁后，请立即更换电池。

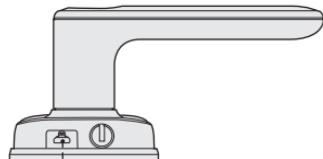


⚠ Micro USB接口

当电池电量过低时，系统在每次成功开锁后，语音提示电量低，请更换电池；此时请及时更换电池。
(请勿将不同型号、新旧电池混用)

系统复位

当系统出现故障无法正常使用时，轻按系统复位键，使系统恢复正常。

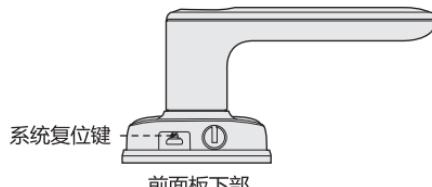


电池更换

1. 电池使用寿命

本产品可放置4节1.5V碱性AA电池，可支持3000次开关门。
(电池使用寿命与用户使用习惯、使用环境、功能选配等有关因素)


2. 电池更换提醒

当系统语音提示“电量过低，请更换电池”时，需要及时更换电池。

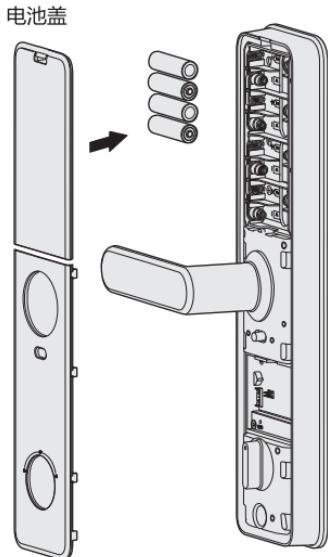

扩展功能 (选配)

可选择添加扩展功能，具体请关注施耐德电气官方网页

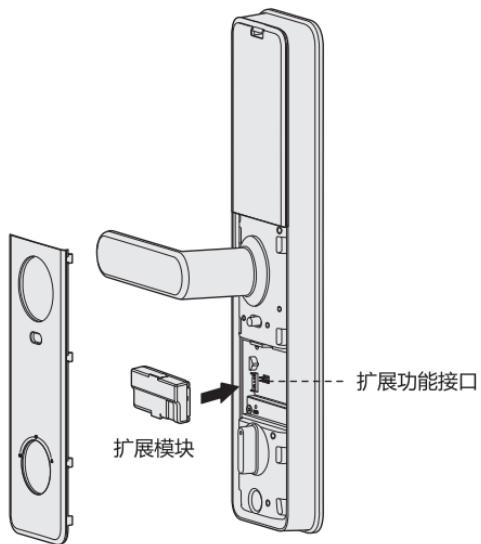

Dear customers, thank you for using our smart lock.

Please check the package content and read the installation instruction carefully before you install this lock, and then install the product according to the instruction.

Our company will not assume any responsibility for direct or indirect product problems, other hazards and losses if you don't follow the instruction to install.

Key card function is only application for certain series. Please refer to the actual product.

Contents

1 Important information -----	25	Delete user PIN code Delete user fingerprint Delete user card** Set the door opening mode Reboot button Record query Extend function (optional)
2 Install your smart lock -----	26	5 Use your smart lock ----- 41 Unlock from outdoor Unlock by Mechanical key Lock from outdoor/ Lock from indoor/ Double lock from indoor Anti-Lockpicking from peephole
3 Overview -----	35	6 Other functions ----- 43 Restore to default setting Emergency power supply System reboot Replace battery Extended functions (optional)
4 Set your smart lock -----	36	
Before you set up		
Enter Master mode		
Modify the master PIN code		
Add user PIN code		
Add user fingerprint		
Add user card**		

**only applicable in series with key card function

1 Important Information

Safety instruction

- Read and understand all instructions before using this smart lock. Damages caused by failure to follow instructions is not covered by the warranty.
- It is recommended to use the enclosures/accessories specified by the company.
- Use only alkaline batteries configured with this product.
- Do not forcibly disassemble this product in order to avoid alarm sound or damage to the product.
- Do not scratch the fingerprint reader with sharp objects, otherwise it may cause permanent Long-term damage.
- Do not expose the product to corrosive substances, so as not to damage the outer protective layer.
- Do not hang objects on the handle, so as not to affect the normal use of the door lock.
- Cleaning the product, please wipe it with a soft cloth.
- Do not disassemble the battery while the device is operating.
- Please choose a professional engineer to install the door lock and follow the company's standard installation instruction , and do not install it by yourself .
- After the door lock is installed , please modify the default master PIN code immediately and keep the mechanical key in a safe place. Don't disclosure PIN code to the unknown person.
- When low battery alarm is triggered, please replace all the batteries in time

Warning

- Do not place battery close to fire in case of explosion .
- Do not short-circuit the two poles of the battery lead with metal objects to avoid explosion.
- Do not let it happened connection of two terminals of battery lead shorted with metal objects in case of explosion.
- Making sure replacement or maintenace are done by professional person authorized by Schneider .
- Your warranty may invalidate if you used accessories produced by other manufacturer or not recommended by Schneider.


Disposal of used battery and lock

- Please understand the local electronic product classification and collection system.
- Please follow the local regulations and do not discard used batteries into ordinary household garbage.
- Properly disposing of used products helps to avoid potential negative impacts on the environment and human health.
- The battery can not be disposed of with ordinary household garbage


2 Install your smart lock

Package list


This Package list is for reference only, and all contents are subject to the actual packaging contents.

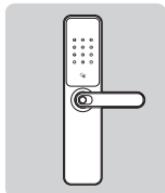


Front panel
(with rubber gasket)

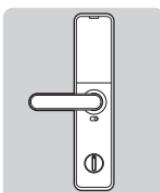


Back panel
(with rubber gasket)

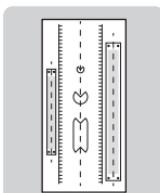


Installation template

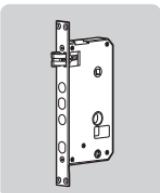


Mortise

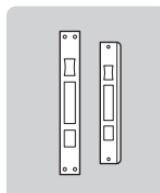

Side plate

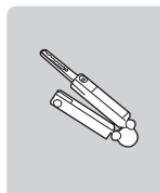

Mechanical key

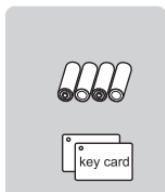

Battery & key card**




Screw pack



User manual

**only applicable in series with key card function

Explosive view

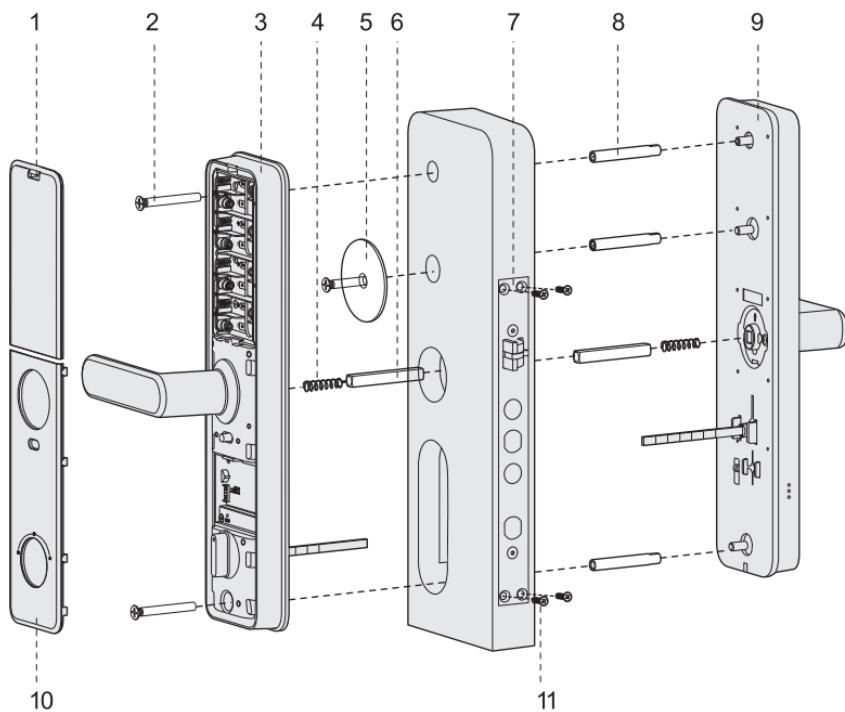


- 1. Battery cover
- 2. M6 mounting screws (3)
- 3. Back panel assembly
- 4. Spring (2)
- 5. Mounting plate
- 6. Square shaft (2)
- 7. mortise
- 8. M6 connecting screw bolt
- 9. Front panel assembly
- 10. Bottom cover
- 11. Screws (4)


Before installation

Check door open direction before installation


Right-out open

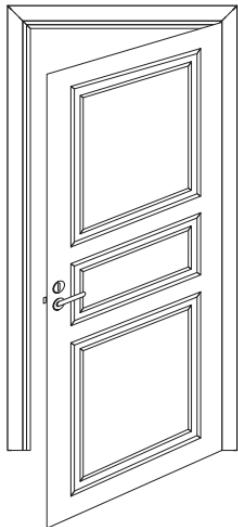


Right-in open

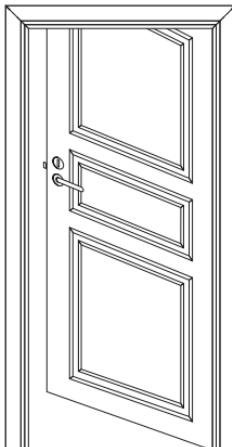


Left-out open

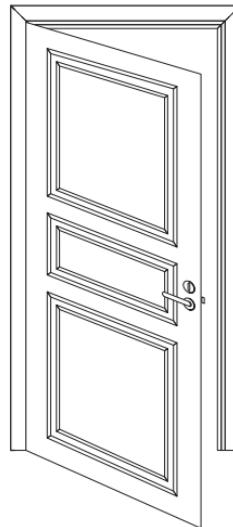

Left-in open

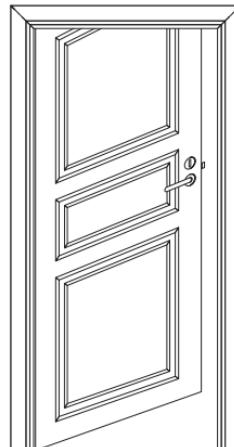




Change cylinder direction

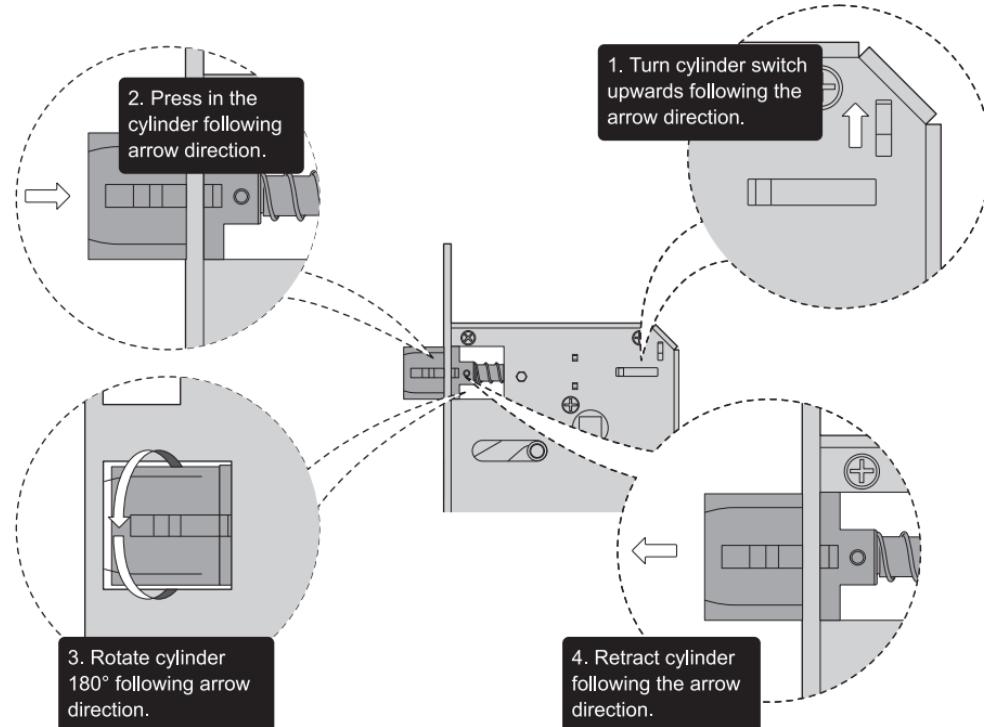

Remark: change directional screw per door opening way (screw must be installed on inner side of the door).

Change handle direction

Change handle direction of front panel

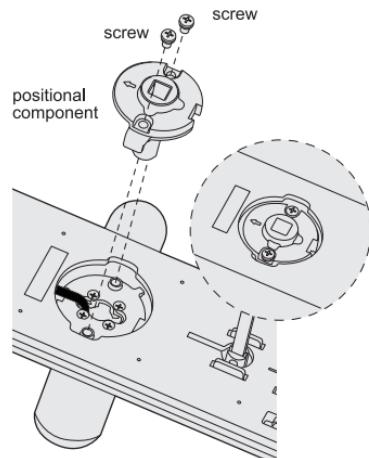
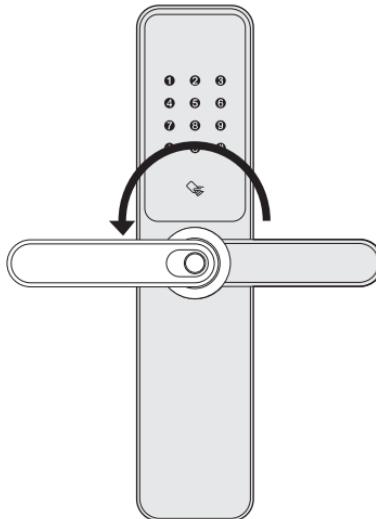
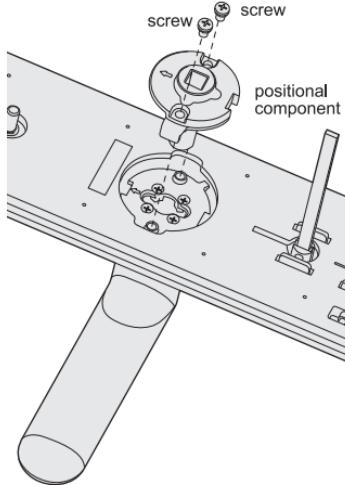


Unscrewing and taking out the screws, positional component and shieldsleeve in order , then move the cable to middle hole.

Rotate handle 180° to the another side.

Put the cable into right side , then put the positional component and shield sleeve back and tighten the screws in order properly.

Change handle of back panel direction

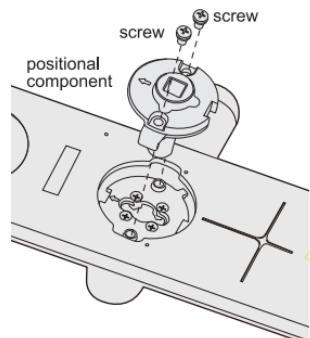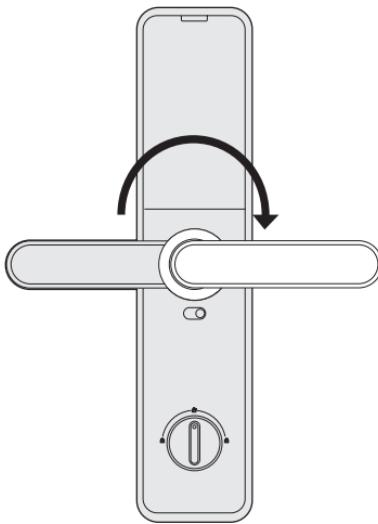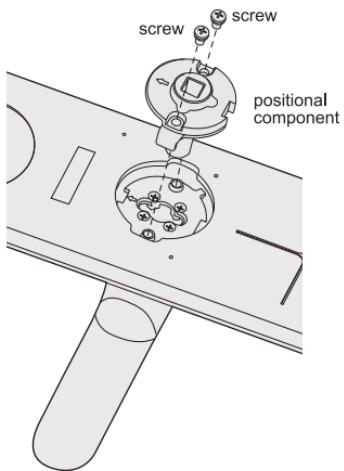


Take out positional components.

Rotate handle 180° to the another side.


Tighten the screws.

Installation steps

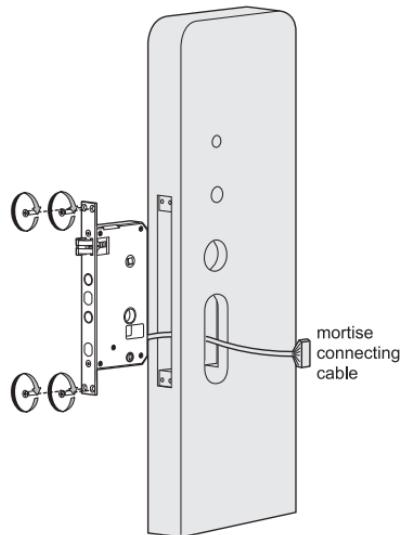


Note: The mortise connecting cable needs to pass through the hole position shown in the above picture into the door.

Drill bores following the installation template and then put the mortise into the door and tighten the four mounting screws.

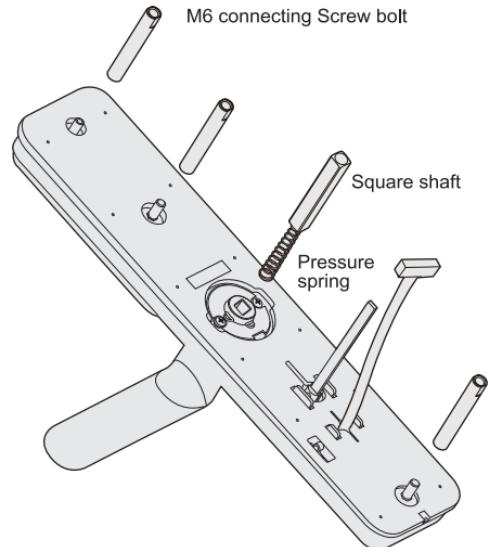


Note: According to the thickness of the door, select the appropriate length square shaft and connecting screw.


Install the connecting screw bolt on the front panel, and put the pressure spring and square shaft in the hole.

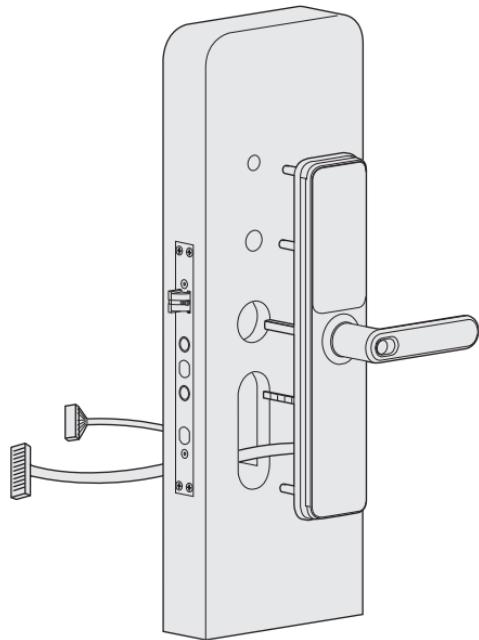


Pass the connecting cables and screw bolts through the bore on the door , and then insert the square shaft into the mortise hole of the front panel.

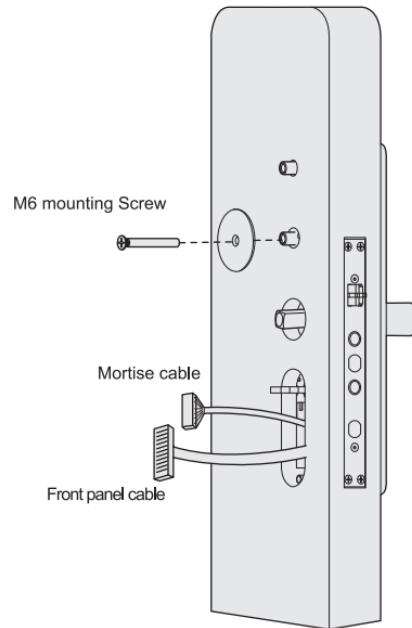

Install mounting plate to tighten front panel.

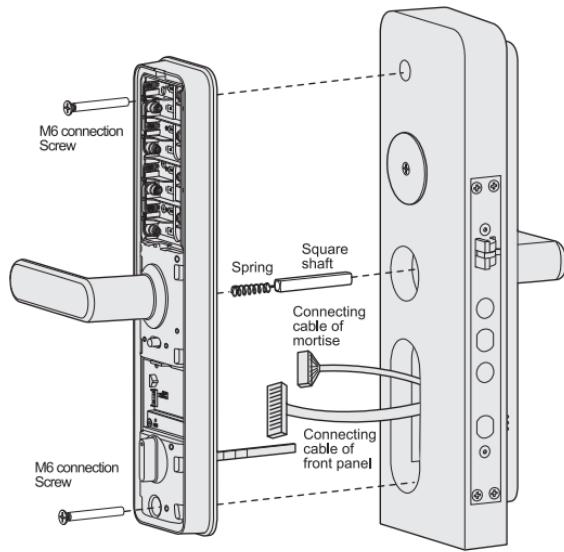


Insert the pressure spring and the square shaft into the hole of back panel. Then insert the front panel cable and mortise cable into the corresponding interfaces on the back panel. The excess cable plugs back the cable holes and then tighten the screws to fix the back panel.

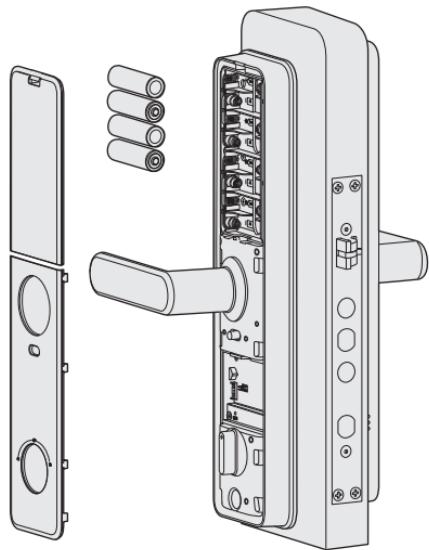


Install the battery(4 AA batteries)in the battery compartment and cover with battery cover. Check if the front and back panels and other components are connected properly.

3 Overview

Outside panel

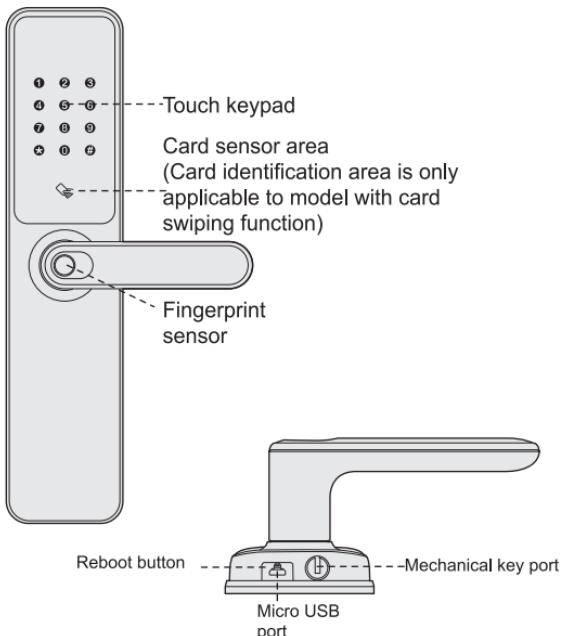

Inside panel

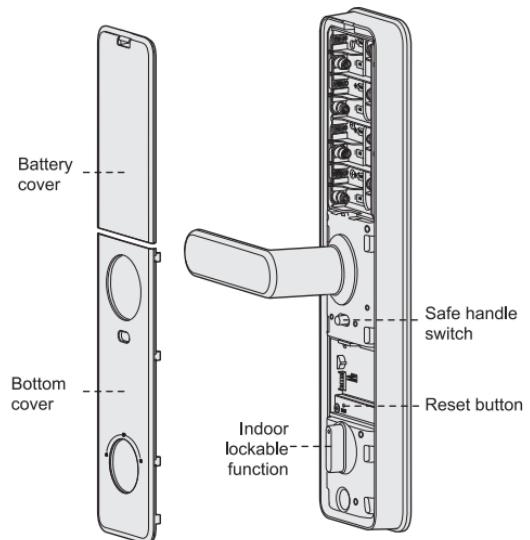

Note: This illustration is for reference, please be subject to the actual product.

4 Set up your smart door lock

Before you set up

The system mode of the smart lock is divided into security mode and common mode, and the default system mode is a common mode.

	Security mode	Common mode
Administrator PIN code	yes Administrator PIN code	yes Default Administrator PIN code is 12345678
User PIN code	10 groups 6-12 Digits 00-04: Regular PIN code 05-08: One time PIN code 09:Duress PIN code Noted: One time PIN code is not available under this mode	10 groups 6-12 Digits 00-04: Regular PIN code 05-08: Temporary PIN code 09:Duress PIN code
Method of entering Administrator mode	entering Administrator PIN code	entering Administrator PIN code
Fingerprint Capacity	100 groups user number :00-99	100 groups user number :00-99
Card Capacity**	100 groups user number :00-99	100 groups user number :00-99

**only applicable in series with key card function

User Number


Under security mode , when you enroll PIN code, fingerprint and card** , you should enter user number.

You can fill in the user information in this table for easy management :

PIN code	Name	User number	Fingerprint	Card**
00				
01				
02				
03				
04				
05				
06				
07				
08				
09				

**only applicable in series with key card function

Enter administrator mode

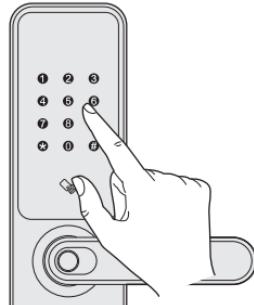

Before changing default administrator PIN code(default is 12345678), all other setting menu will be disabled. You have to change the administrator PIN code first, then do other lock settings.

For the first time, you need to choose the language, 1 is Chinese, 2 is English;

1. Touch the keypad area to light up the keypad.
2. Press * twice and enter the administrator PIN code with # key to confirm.
3. Voice prompt: administrator mode.

Modify the administrator PIN code

Under administrator mode:



Press 1 for user setting, then press 9 to modify the administrator PIN code.



Enter the new administrator PIN code and press # key to confirm , then repeat the above operation again . Voice prompt : settings succeeded.

Enroll user PIN code

Under administrator mode:



Press 1 for user setting, then press 1 to enroll user PIN code. Enter 2 digital user number and press # to confirm.



Enter 6-12 digitals user PIN code and press #key to confirm , then repeat the above operation. Voice prompt : setting succeeded.



00-04 is normal user; 05-08 is temporary user, which will be invalid after one time use or under security mode; 09 is duress user , which works with wireless modules when duress event occurs.

Enroll User fingerprint

Under administrator mode:



Press 1 for user setting, then press 2 to enroll user fingerprint. Enter 2 digital user number and press # key to confirm.



Place your finger on the fingerprint sensor and then take away your finger after voice prompt " remove your finger and scan again ". Repeat the above steps until voice prompt "setting succeeded".



00-99 is normal user, and 95-99 is duress user which works with wireless module and trigger alarm when duress event occurs.

Enroll user card**

Under administrator mode:

1 3 #

Press 1 for user setting, then press 3 to enroll card. Enter 2 digital user number with # to confirm.



Put the card close to the card sensor area until one beep sound
Voice prompt : Settings succeeded.

Delete user PIN code

Under administrator mode:

1 4 1 #

Press 1 for user setting, then press 4 to delete user PIN code. Press 1 to delete single user PIN code and enter 2 digits user number with # to confirm . Voice prompt : deletion succeeded.

1 4 2

Press 1 for user setting, then press 4 to delete user PIN code. Press 2 to delete all user PIN code . Voice prompt : deletion succeeded.

Delete user fingerprint

Under administrator mode:

1 5 1 #

Press 1 for user setting, then press 5 to delete user fingerprint. Press 1 to delete single user fingerprint and then enter 2 digits user number with # to confirm or place finger on the fingerprint sensor until one beep sound. Voice prompt : deletion succeeded.

1 5 2

Press 1 for user setting, then press 5 to delete user fingerprint. Then press 2 to delete all user fingerprint .
Voice prompt : deletion succeeded.

Delete user card**

Under administrator mode:

1 6 1 #

Press 1 for user setting, then press 6 to delete user card. Press 1 to delete single user fingerprint and then enter 2 digits user number with # to confirm or put card deleting close to the card sensor until one beep sound.
Voice prompt : deletion succeeded.

**only applicable in series with key card function

1 6 2

Press 1 to enter the user settings, then press 6 to enter the user card, and then press 2 to enter all the deletion, the voice prompt is deleted successfully.

Opening mode setting

Under Administrator mode:

1 7 1

Press 1 for user setting, then press 7 to set opening mode. Press 1 for common mode which means it can be unlocked by single verification(PIN code or fingerprint).

1 7 2

Press 1 for user setting, then press 7 to set opening mode. Press 2 for security mode which means it is unlocked by dual verification (PIN code and fingerprint).

System settings

Voice settings

Under Administrator mode:

2 1 1 or 2

Press 2 for system settings , then press 1 to set voice: Press 1 to enter voice mode where all voice enables; Press 2 to enter mute mode where voice disables except alarm sound and voice guide under master mode.

language settings

Under Administrator mode:

2 2 1 or 2

Press 2 for language setting then press 2 to enter system setting : press 1 for Chinese voice; press 2 for English voice.

Record query

System query

Under Administrator mode:

3 1

Press 3 to query record then press 1 to enter system query. The voice reads the serial number.

Extended function (optional)

Join the network


Under Administrator mode:

4 1 or 2

Press 4 to enter extended function : press 1 to join network; press 2 to exit network.

5 Use your smart lock

How to open the door from outside

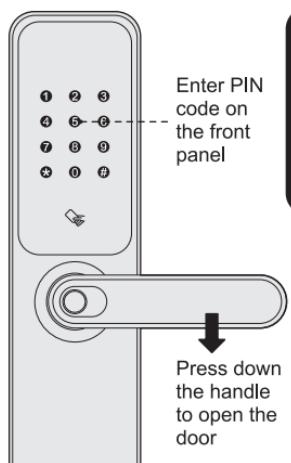

Touch the pad screen to lighten keypad; then entering the enrolled PIN code. After voice prompt “Verification succeeded, welcome home”, pressing down the handle to open the door.

Place the enrolled finger properly on the fingerprint sensor area. After voice prompt “Verification succeeded, welcome home”, pressing down the handle to open the door.


Place the enrolled card properly on the card icon area. After voice prompt “Verification succeeded, welcome home”, pressing down the handle to open the door.

⚠ Under security mode, PIN code + fingerprint (PIN code + card or card** + fingerprint) is required to unlock by dual verification.**


**only applicable in series with key card function

Unlock with Mechanical Key


If emergency occurs such as password lost, running out of battery, or system not working, you can use the spare mechanical key to unlock.

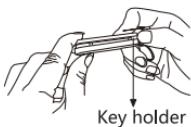

1. Open the box, take out the key holder and push the button to release the key.

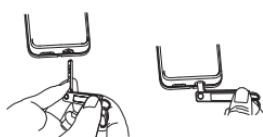


2. Insert the key to keyhole, make sure key holder is perpendicular to the key, rotate the key holder towards door holder until it is next to the door ;

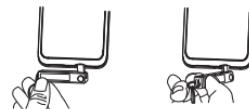


3. Turn the key holder 180 degrees downwards and in horizontal position, rotate the key holder towards door holder and open the door.

Lock from Outdoor/ Lock from Indoor/Double-lock from indoor

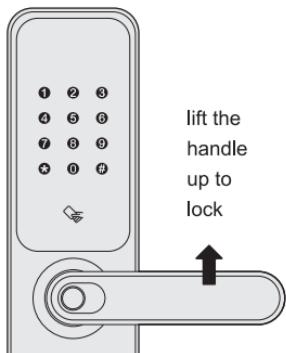


Front panel

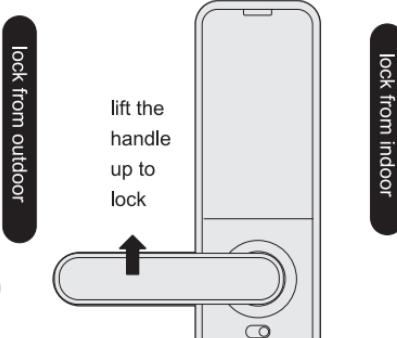

Back panel

lock from indoor

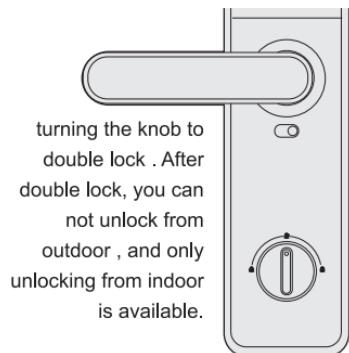

Back panel


Double lock from indoor

Anti-Lockpicking from peephole

Anti-lockpicking by fastening the door handle from inside.

Operation

1. Switch button to red position and turn on peephole security function.
2. Switch button to green position and turn off peephole security function.

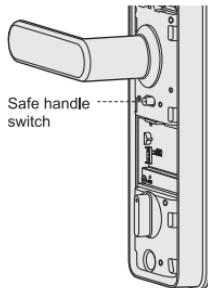


6 Other functions

Restore to factory setting

If you forgot your administrator PIN code, long press the [RES] button for 5 seconds to restore factory setting.


After voice prompted "Restored to factory setting, please change

Administrator PIN code", that means restore to factory setting succeed, and all user data and settings will be deleted.

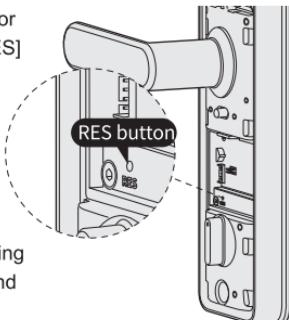

Emergency power supply


When the battery voltage is too low to open the lock from outside, you can use 5V power bank to charge the door lock via Micro USB port. After the door is unlocked, please replace all batteries immediately. When the lock system crash down, you can restart system by pressing the reboot button.

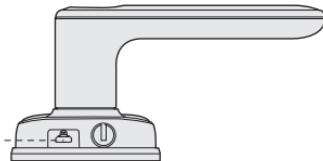

- ⚠** When battery voltage is lower than 4.8V, voice prompts "Low battery, please replace all batteries" at each unlocking. Please replace all batteries immediately, and do not mix old batteries and new batteries together in replacement.


Reboot button

Press the reboot button to restart the lock, when the system is unresponsive. No user data is deleted.

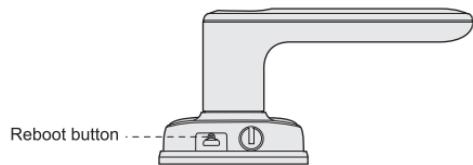


Replace battery

The smart door lock comes with 4 1.5V AA Alkaline batteries. It can support 3000 times door openings. (battery service life may be varied due to use habit, working environment and working function).

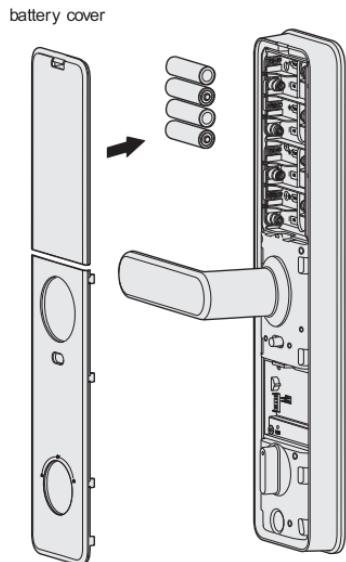

Extended function(optional)

Extended network module is reserved for smart home system, please contact Schneider for more details .

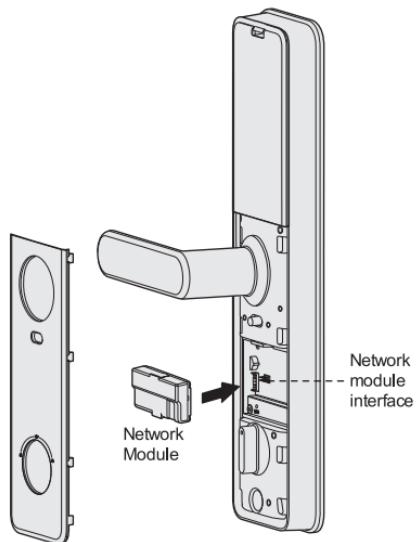

尊敬的閣下，

在使用本智能鎖前，請閱讀並理解所有說明內容。

因未能遵守說明而造成的損壞不在維修保證範圍內。

智能匙啓功能只適用於部分型號，具體請以產品實物為準

在保修期內，如有下列情況，不屬於免費保修範圍。

1. 未按說明書要求正確使用或人為原因造成的損壞與故障。
2. 非我司專業人員拆卸，客戶自行拆卸維修而造成的損壞。
3. 由於自然原因（地震、火災、水災）等外部不可抗因素所造成的損壞。

超出質保期的產品，將收取合理費用提供維修保養服務。

本品適用於每個單元有兩個及以上疏散樓梯的住宅建築內。

目錄

1.重要資訊 -----	47	4.設定您的智能鎖-----	58	5.使用您的智能鎖 -----	63
安全		設定前須知		室外開啟	
警告		進入管理員模式		機械鑰匙開啟	
舊產品和電池的處理		修改管理員密碼		室外上鎖/室內上鎖/室內反鎖	
2.安裝您的智能鎖 -----	48	加載用戶密碼		防盜眼功能	
產品列表		加載用戶指紋			
安裝裝配圖		加載用戶智能匙咭**		6.其他功能 -----	65
安裝前須知		刪除用戶密碼		重設原廠設定	
安裝步驟		刪除用戶指紋		應急電源	
		刪除用戶智能匙咭**		系統重設	
3.了解您的智能鎖 -----	57	設定開啟模式		電池更換	
前置面板		系統設定		擴展組件 (選配)	
後置面板		記錄查詢			
		擴展功能 (選配)			

**只適用於帶智能匙咭的型號

1.重要資訊

安全

- 在使用本智能鎖前，請閱讀並理解所有說明內容。因未能遵守說明而造成的損壞不在維修保證範圍內
- 建議使用本公司指定的附件及配件
- 僅使用本產品配置的鹼性電池
- 請勿強行拆卸本產品，以免發出警報或損壞產品
- 請勿用尖銳物品刮花指紋傳感器，否則可能造成永久性損壞
- 請勿將產品接觸到腐蝕性物質，以免破壞外殼保護層
- 請勿在把手上懸掛物件，以免影響門鎖正常使用及運作
- 請用軟布擦拭以清潔產品
- 請勿在設備操作時裝拆電池
- 請您選擇專業的工程師安裝門鎖，並按照本公司的安裝標準進行操作，切勿私自裝拆
- 門鎖安裝測試合格後，請第一時間內修改出廠設定的預設管理員密碼並妥善保管好機械鑰匙，不要輕易洩露密碼資料
- 門鎖觸發低電量警報後，請及時更換全部電池，並確保安裝正確。

警告

- 不要將電池靠近火種，以免發生爆炸
- 請勿使用不符合安全規格的應急電源為本產品提供電源
- 請勿用金屬物將電池引線的兩級連接成短路，以免引起爆炸
- 確保由施耐德電氣、施耐德電氣授權的服務中心或專業維修人員進行更換
- 如使用由其他製造商生產的，或未經施耐德電氣推薦的附件或部件，您的產品維修保證可能會失效


舊產品和電池的處理

- 請自行了解當地或本地的電子產品分類收集系統
- 請遵守當地或本地規定，不要將舊電池丟棄到普通生活垃圾中
- 正確棄置舊產品有助於避免對環境和人類健康造成潛在的負面影響
- 電池不可與普通生活垃圾一起處理


2 安裝您的智能鎖

產品列表


本產品列表僅供參考，一切以實物包裝內容為準

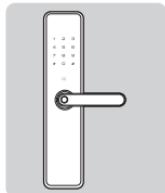


前置面板(含矽膠墊)

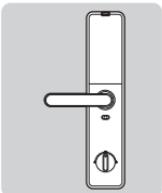


後置面板(含矽膠墊)

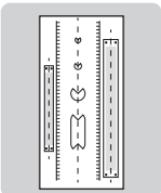


開窿範本

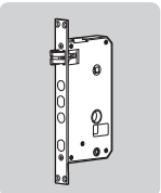


鎖體

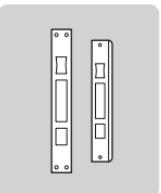

側面扣板

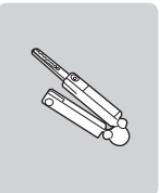

機械鑰匙

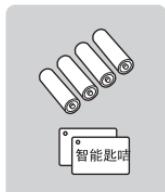

電池及智能匙咭**



安裝配件包




使用說明書

**只適用於帶智能匙咭的型號

安裝裝配圖

了解安裝裝配圖，有利於了解門鎖的機械結構

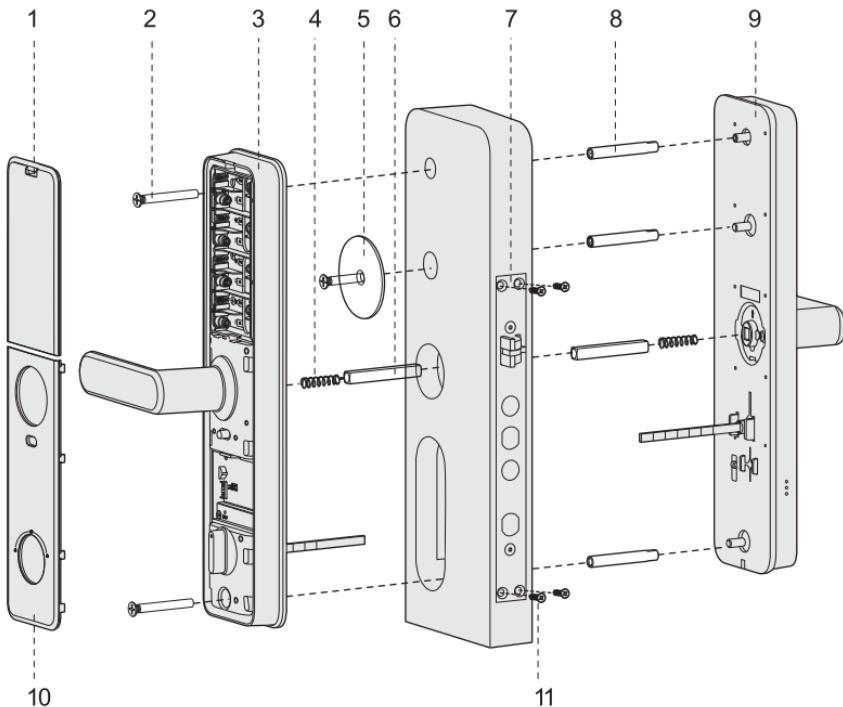


- 1.電池面蓋
- 2.M6固定螺絲 (3個)
- 3.後置面板組件
- 4.彈簧 (2個)
- 5.固定板
- 6.方軸 (2個)
- 7.鎖體
- 8.M6螺絲管 (3個)
- 9.前置面板組件
- 10.後置面板面蓋
- 11.固定螺絲 (4個)


安裝前須知

安裝前請先確認開門方向


向右外開

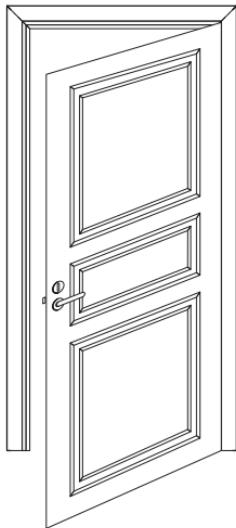


向右內開

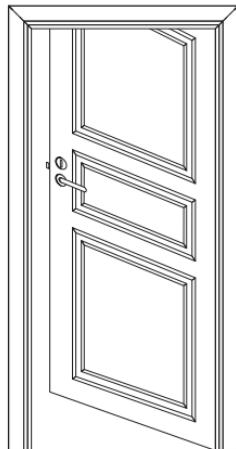


向左外開

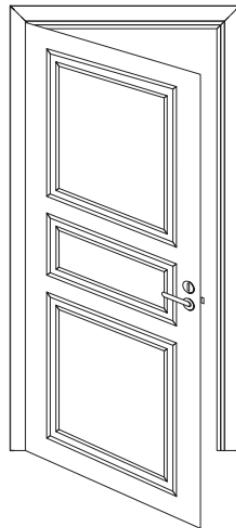

向左內開



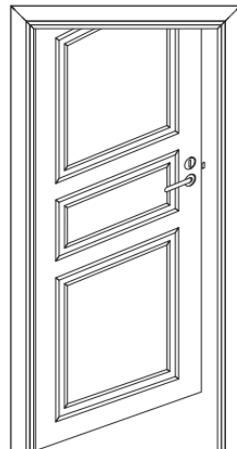


門舌轉向

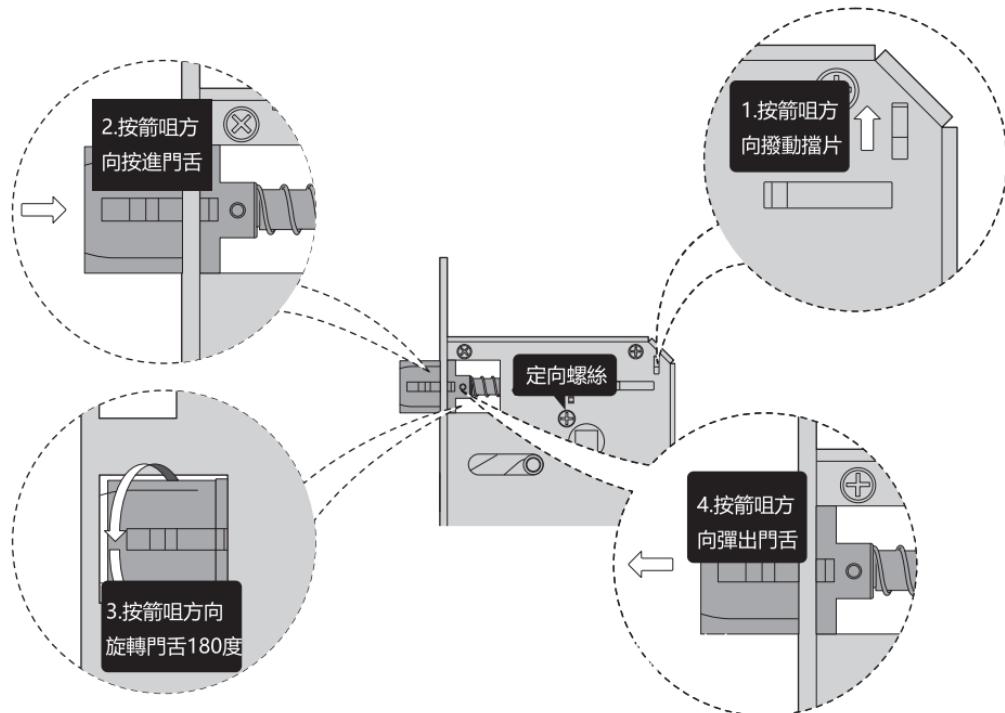




注意：根據內外開門需求，更改定向螺絲方向。（定向螺絲一定
要裝在門的內側，哪面裝定向螺絲，哪面必須是後置面板）

把手轉向 前置面板把手轉向

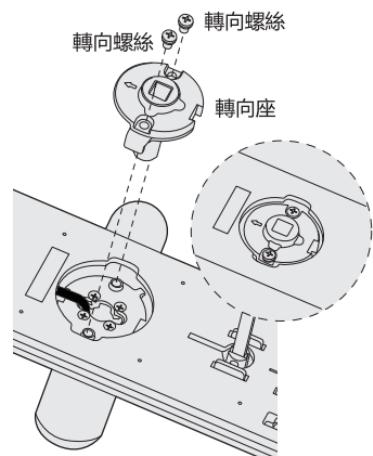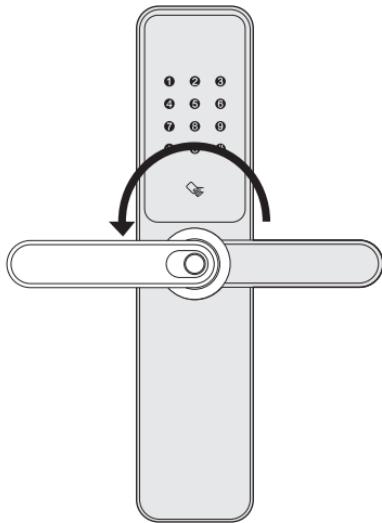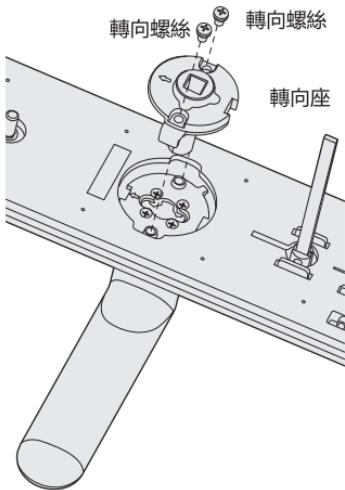

鬆開兩顆轉向螺絲後，移開轉向座，
取出把手護套，將信號線從壓線槽
移到中間窿位

後置面板把手轉向

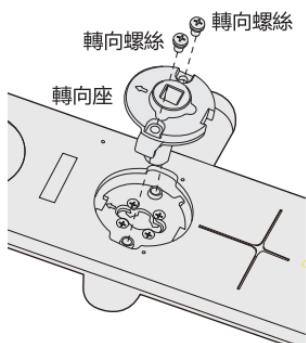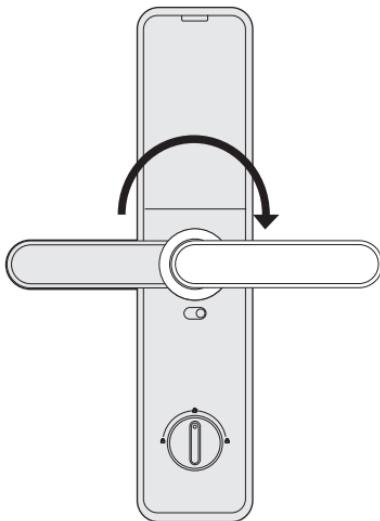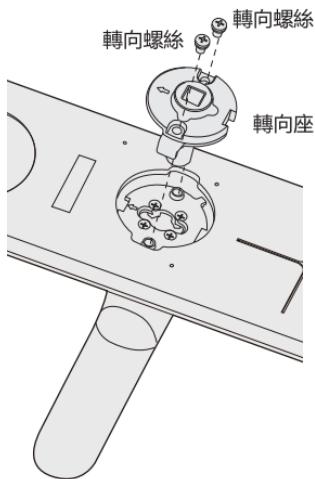


鬆開兩顆轉向螺絲後，移開轉向座

旋轉180度至正確位置

裝入轉向座，繫緊兩個轉向螺絲


注意：根據門的厚度選擇不同規格的配件包。預設出廠設定的配件包適用38-90mm的門厚，如果是其他規格的門，請聯繫我們。

安裝步驟

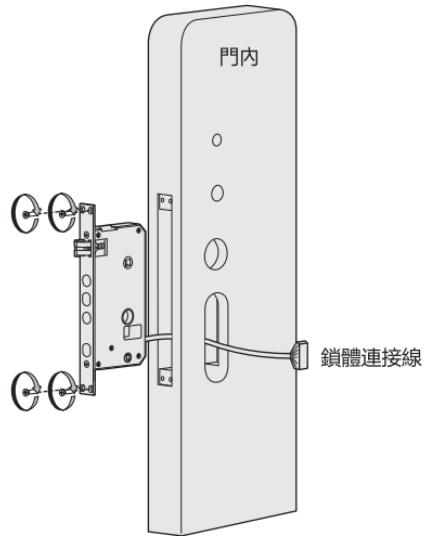


注：鎖體連接線需穿過上圖所示的窿位，進入到門內。

根據開窿範本在門上開好窿並將鎖體放入門框內，繫緊固定螺絲

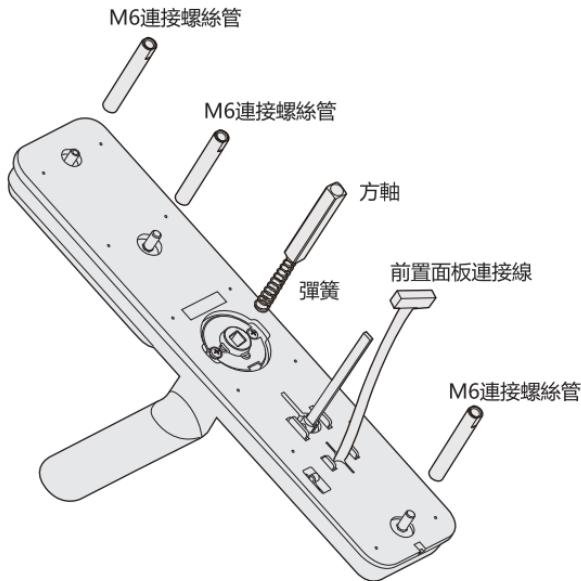


注：根據門的厚度，選擇適當長度方軸和連接螺絲管

在前置面板上裝上連接螺絲管，把彈簧扭進方軸窿中，
然後把彈簧和方軸放入轉向座的方窿中。

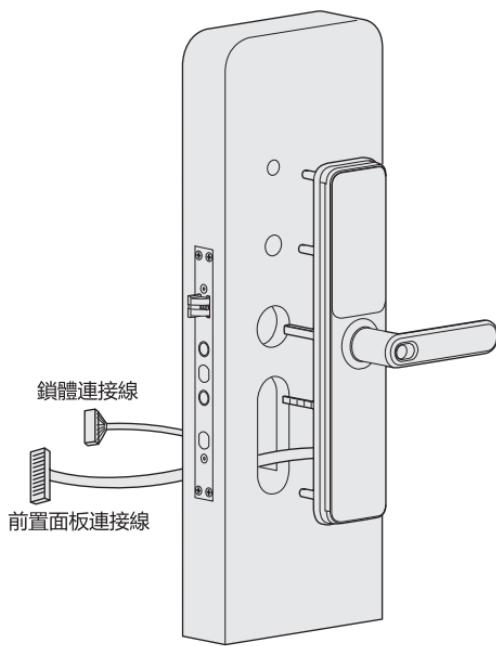


注意：機械鑰匙撥片根據門厚度剪到合適長度然後對準鎖體相應的轉動窿插入。

將連接線穿過門上方的過線窿，前置面板的方軸和機械鑰匙撥片對準鎖體上相應的轉動窿插入。

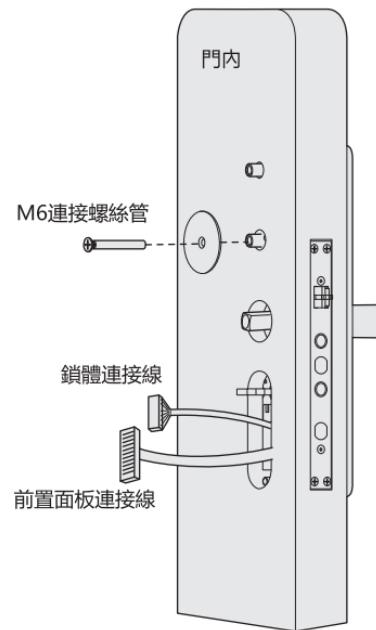

將固定板如圖所示安裝，鎖緊固定板螺絲，固定前置面板

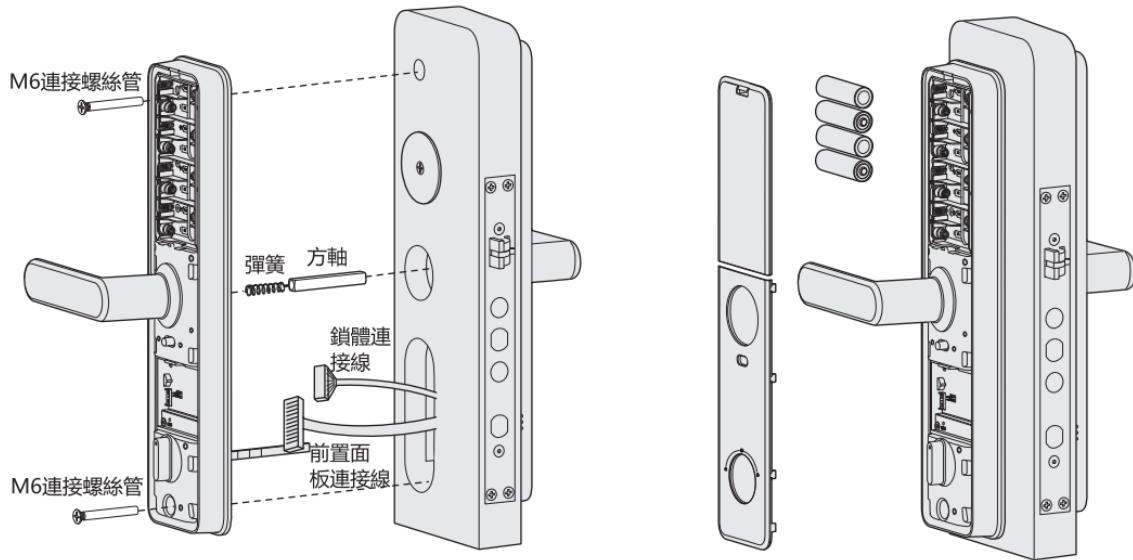


注意：反鎖撥片根據門厚度剪到適合長度然後對準鎖體相應的轉動窿插入。

在後置面板上裝上彈簧和方軸，後置面板的方軸和反鎖撥片對準鎖體相應的轉動窿插入，前置面板連接線和鎖體連接線插入後置面板相應的接口，多餘的線塞回過線窿，繫緊螺絲固定後置面板


在後置面板上裝上電池（4塊AA電池）並扣上電池面蓋。檢查前置、後置面板等，各個部件是否連接完好。

3 了解您的智能鎖

前置面板

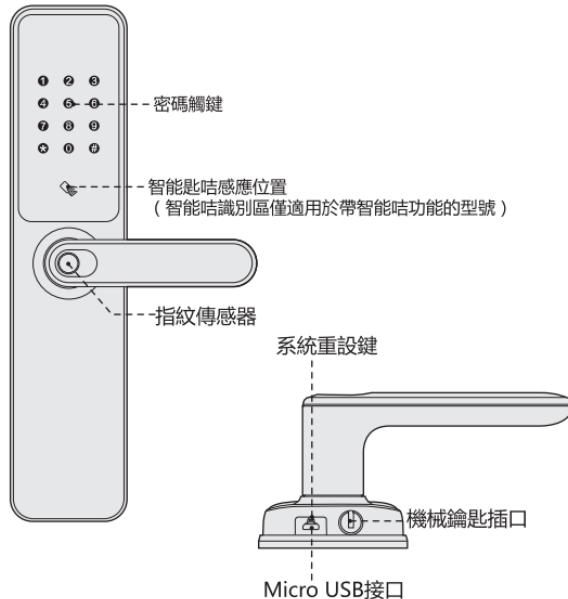

後置面板

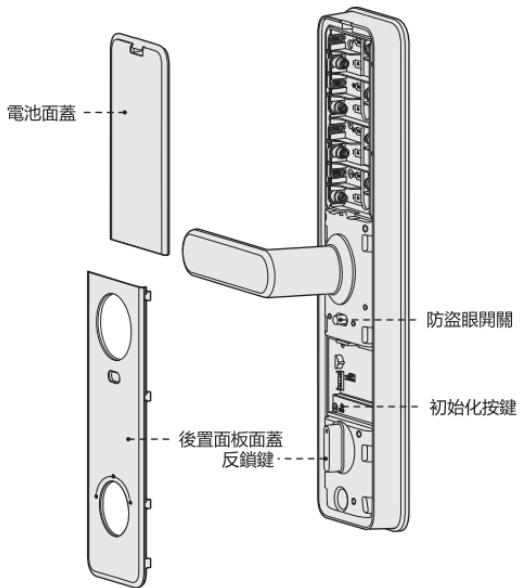

注：本示意圖只作示意用途，實際以產品為準

4 設定您的智能鎖

設定前須知

智能鎖的系統模式分為安全模式和常用模式，出廠設定的系統模式為常用模式

	安全模式	常用模式
管理員密碼	有 進入安全模式前的管理員密碼	有 初始化管理員密碼12345678
用戶密碼	10組 6-12位 編號00-04：常用密碼 編號05-08：一次性密碼 09：安全威脅密碼 注意：在安全模式下，一次性密碼不可使用	10組 6-12位 編號00-04：常用密碼 編號05-08：一次性密碼 09：安全威脅密碼
指紋數量	100枚 有編號00-99	100枚 有編號00-99
智能匙咭數量**	100枚 有編號00-99	100枚 有編號00-99
進入管理員模式的方法	通過輸入管理員密碼	通過輸入管理員密碼

△ 設置安全模式前，必須先讀取指紋、密碼、智能匙咭**三者中的其中兩個；支援32位虛位密碼

**只適用於帶智能匙咭的型號

用戶編號

在安全模式下，當您輸入密碼、讀取指紋、智能匙咭**資料時，需要對用戶進行編號當您需要刪除個別用戶時，您可以依據其編號，從系統中直接刪除，無需全部刪除。


可以將用戶資料填入此編號表，以便方便管理。

編號	姓名	密碼	指紋	智能匙咭**
00				
01				
02				
03				
04				
05				
06				
07				
08				
09				

**只適用於帶智能匙咭的型號

進入管理員模式

首次使用，需要選擇語言，1為中文，2為英文；

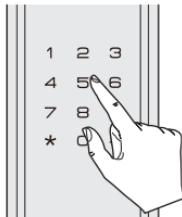

注意事項：

00~04為常用密碼
05~08為臨時密碼，開鎖一次後立即失效，
在安全模式下臨時密碼不能開鎖。
僅在配置有無線模塊時，
09才可作為安全威脅密碼，開鎖後可輸出報警信號。

初始管理員密碼：12345678

- 1.用手掌面觸碰密碼觸鍵以喚醒按鍵，鍵盤燈將會發亮。
- 2.先按*鍵兩次，再輸入管理員密碼。按#鍵確認
- 3.語音提示：已進入管理員模式

△ 如果管理員密碼為初始密碼，請先修改管理員密碼

修改管理員密碼

在管理員模式下：

1 9

按下1鍵進入用戶設定，再按9鍵進入修改管理員密碼

#

輸入新的管理員密碼，按#鍵確認，再次輸入管理員密碼，
按#鍵確認。語音提示設定成功。

用戶設定

加載用戶密碼

在管理員模式下：

1 1 #

按下1鍵進入用戶設定，再按1鍵進入加載用戶密碼，輸入兩位
用戶編號，按#鍵確認

#

輸入6-12位開啟密碼，按#鍵確認，再次輸入開啟密碼，按
#鍵確認，語音提示設定成功。

加載用戶指紋

在管理員模式下：

1 2 #

按下1鍵進入用戶設定，再按2鍵進入加載用戶指紋，輸入兩
位用戶編號，按#鍵確認。



將手指按壓在指紋傳感器上，待聽到語音提示“請拿開手指，
再放一次”時，拿開手指並重新放回指紋傳感器上，根據語
音提示重複多次，待聽到語音提示加載成功後，表示用戶
指紋加載成功。

加載用戶智能匙咭**

在管理員模式下：

1 3 #

按下1鍵進入用戶設定，再按3鍵進入加載用戶智能匙咭，輸
入兩位用戶編號，按#鍵確認。將智能匙咭靠近感應位置直到
“滴”聲響，語音提示加載成功。

**只適用於帶智能匙咭的型號



將智能匙咭靠近感應位置直到“啞”聲響，語音提示加載成功。

刪除用戶密碼

在管理員模式下：

1 4 1 #

按下1鍵進入用戶設定，再按4鍵進入刪除用戶密碼，再按1鍵進入到個別刪除，輸入兩位用戶編號，按#鍵確認，語音提示刪除成功

1 4 2

按下1鍵進入用戶設定，再按4鍵進入刪除用戶密碼，再按2鍵進入到全部刪除，語音提示刪除成功。

刪除用戶指紋

在管理員模式下：

1 5 1 #

按下1鍵進入用戶設定，再按5鍵進入刪除用戶指紋，再按1鍵進入到個別刪除，輸入兩位用戶編號，按#鍵確認，或將要刪除的指紋放在指紋傳感器直到“啞”聲響語音提示刪除成功。

1 5 2

按下1鍵進入用戶設置，再按5鍵進入刪除用戶指紋，再按2鍵進入到全部刪除，語音提示刪除成功。

刪除用戶智能匙咭**

在管理員模式下：

1 6 1 #

按下1鍵進入用戶設置，再按6鍵進入刪除用戶智能匙咭，再按1鍵進入到個別刪除，輸入兩位用戶編號，按#鍵確認，或者將要刪除的智能匙咭靠近感應位置直到“啞”聲響語音提示刪除成功。

1 6 2

按下1鍵進入用戶設置，再按6鍵進入刪除用戶智能匙咭，再按2鍵進入到全部刪除，語音提示刪除成功。

設置開啟模式

在管理員模式下：

1 7 1

按下1鍵進入用戶設定，再按7鍵進入設定開啟模式，再按1鍵選擇常用模式，密碼、指紋、智能匙咭驗證開啟

1 7 2

按下1鍵進入用戶設定，再按7鍵進入設定開啟模式，再按2鍵選擇安全模式，密碼+指紋（密碼+智能匙咭或者指紋+智能匙咭），雙重驗證開啟。

系統設定

語音設定

在管理員模式下：

**只適用於帶智能匙咭的型號

2 1 1 或 2

按下2鍵進入系統設定，再按1鍵進入到語音設定；按1鍵設定為語音模式，整個系統語音提示；按2鍵，設定為靜音模式，整個系統無語音提示（除警報音和操作管理員功能表外）。

語言設定

在管理員模式下：

2 2 1 或 2

按下2鍵進入系統設定，再按2鍵進入到語言設定；按1鍵，設定為普通話模式，整個系統提示音為普通話；按2鍵，設定為英文模式，整個系統提示音為英文。

時間設定

在管理員模式下：

2 3

按下2鍵進入系統設定，再按3鍵進入到時間設定；請輸入時分4位時間，例如：13：40，請輸入1340，輸入完畢以“#”結束，設定成功後，系統會播報一次；

日期設定

在管理員模式下：

2 4

按下2鍵進入系統設定，再按4鍵進入到日期設定；請輸入年月日8位日期，例如：2020.06.08，請輸入20200608，輸入完畢以“#”結束，設定成功後，系統會播報一次；

記錄查詢

系統查詢

在管理員模式下：

3 1

按下3鍵進入記錄查詢，再按1鍵進入到系統查詢；語音提示本鎖的防偽碼。

擴展功能（選配）

加入網路




在管理員模式下：

4 1 或 已

按下4鍵進入擴展功能；按1鍵加入網路；按2鍵退出網路。

5 使用您的智能鎖

室外開啟

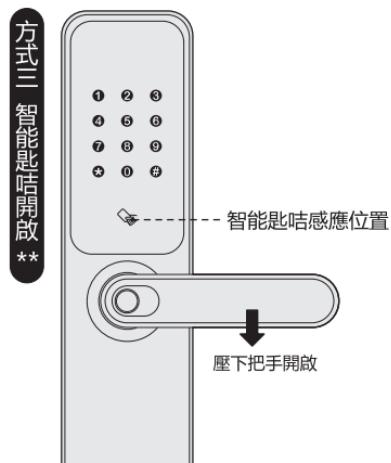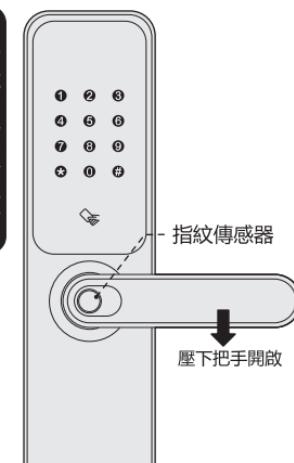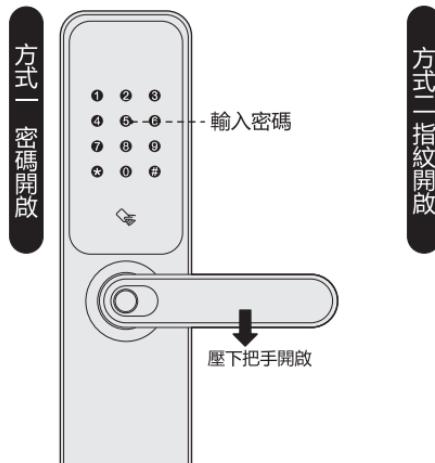

觸碰密碼觸鍵，喚醒系統；在密碼觸鍵
輸入已經加載的密碼，按#鍵確認；語音
提示“驗證成功，請開門”，壓下把手開啟

直接將已經加載指紋的手指放到指
紋傳感器上，語音提示“驗證成功，
請開門”，壓下把手開啟。


將已經加載的智能匙咭放置於感應位置上，
語音提示“驗證成功，請開門”，壓下把手開啟。

⚠ 在安全模式下，需要密碼+智能匙咭**（密碼+指紋、智能匙咭**+指紋）雙重驗證才能開鎖；用戶密碼前後可任意加載虛位密碼（包
括虛位密碼在內長度不超過32位）。


**只適用於帶智能匙咭的型號

機械鑰匙開啟


如果出現忘記密碼、電池耗盡或系統無法正常運作等緊急情況，可使用備用機械鑰匙開啟。

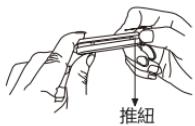

1. 剪開鑰匙盒，取出機械鑰匙，推開推紐，滑出鑰匙。

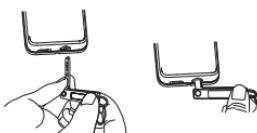

2. 將機械鑰匙插入鑰匙孔，鑰匙套與鑰匙垂直90度，鑰匙套向把手方向轉動90度，直至最靠近門邊。

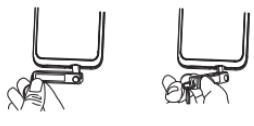


3. 將鑰匙套向下轉動180度，將其平行於水平面，向把手方向水平轉動鑰匙套，即可推或拉動門開鎖。

室外上鎖/室內上鎖/室內反鎖



室外|前置面板

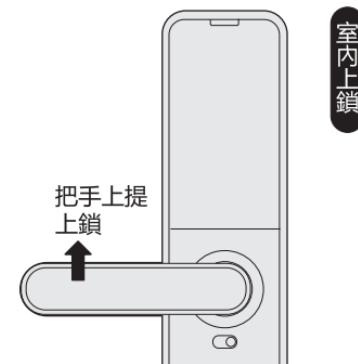

室內|後置面板



室內|後置面板

防盗眼功能


開啟此功能，可實現從室內鎖定本鎖，室內不能開啟鎖，室外可正常開啟門鎖。

1、功能開啟

將開關撥至紅色檔位置。


2、功能關閉

將開關撥至綠色檔位置。

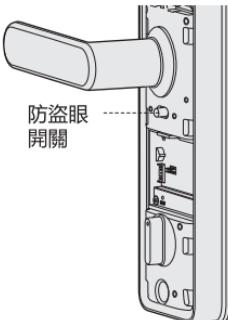

應急電源

當電池電壓不足而無法從外部開啟時，您可以通過使用5V充電裝置作為應急電源，通過Micro USB接口給門鎖提供電源，開啟門鎖後，請立即更換電池。

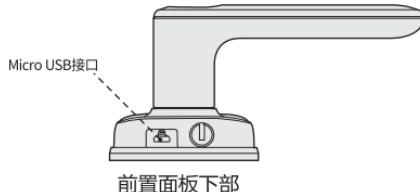


當電池電量過低時，系統在每次成功開鎖後，均會語音提示電量過低，請更換電池；此時，請及時更換電池。
(請勿將不同型號、或新舊電池混合使用)

6 其他功能


重設原廠設定

如果您不慎遺忘管理員密碼，可拆開後置面板面蓋，在通電的狀態下，長按初始化按鍵5秒及待語音提示“已重設出廠設定，請及時修改管理員密碼”，即表示本鎖已初始化成功。

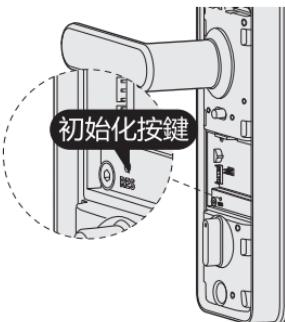

系統重設

當系統出現故障而無法正常使用時，輕按系統重設鍵，使系統回復正常。

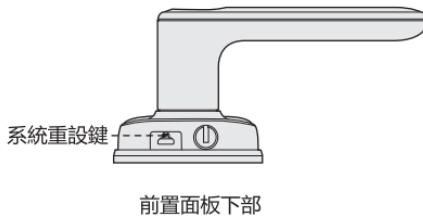


電池更換

1. 電池使用壽命

本產品配置4塊1.5V鹼性AA電池，可支持3000次開關門。
(電池使用壽命與用戶使用習慣、使用環境、功能選配等因素有關)。


2. 電池更換提示

當系統語音提示“電量過低、請更換電池”時，需要及時更換電池。

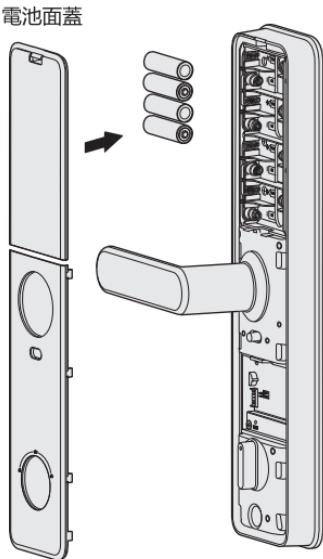

擴展功能（選配）

擴展組件可選擇智慧家居組件，具體請關注施耐德電氣官方網頁。

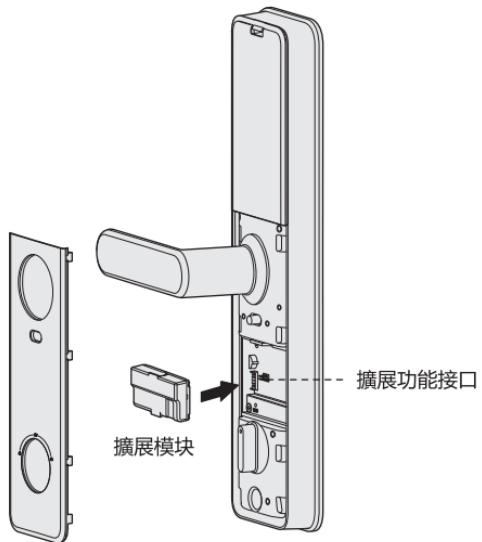

施耐德电气(中国)有限公司
北京市朝阳区望京东路六号A座
客户支持热线: 400 810 1315

Schneider Electric Asia Pacific Limited
11th Floor, Kerry Centre, 683 King's Road, Quarry Bay, Hong Kong
se.com/contact

奇胜 CLIPSAL 奇勝 

Clipsal, 奇胜, 奇勝, 是施耐德电气公司, 其子公司的商标及财产。
Clipsal, 奇胜, 奇勝 are trademarks and the property of Schneider
Electric SE, its subsidiaries and affiliates.

ECN202007467	Update content and pls link to NNZ55742, 2020/08/01	Sinda LIN	02	
ECN202007466	Update content, 2020/07/29	Sinda LIN	01	
DECN201919532	Initial Release, 2019/07/01	Sinda LIN	00	
DECN/ECN/TCAN	DESCRIPTION		DRN	REV
NUMBER :	MFR4457205		Revision: 02	1/1